

****サウンドブルトラなりきり****



の遊び方



魚 警 告 (けいこく)

保護者の方へ必ずお読みください。

●小部品があります。誤飲・窒息の危険がありますので、3才未満のお子様には絶対に与えないでください。

注 意 (ちゅうい)



《使用上の注意》●本商品は精密な電子部品で構成されています。落としたり、がにぬらしたり、だしたり、分解したりしないでください。また、高温・低温になる所での使用、保管はさけてください。●梱包材は、開封後はすぐに捨ててください。●本商品を樹脂製のソファーやシート、タイルなどの注意を表するいでください。長時間接触していると色が移る場合があります。●可動部分・取付部分を無理な方向に強く引っ張ったり、曲げたりしないでください。●発音の一部にイントネーションが違っていたり、商品の特性上聞き取りにくいものがありますが、ご了承ください。●セットされている電池はテスト用です。音声が小さくなったら電池を交換してください。




! 保護者の方へ

この枠内では、本商品をご使用になるときに、 注意していただきたいことを記載しております。 よくお読みいただき、お子様へご説明ください。






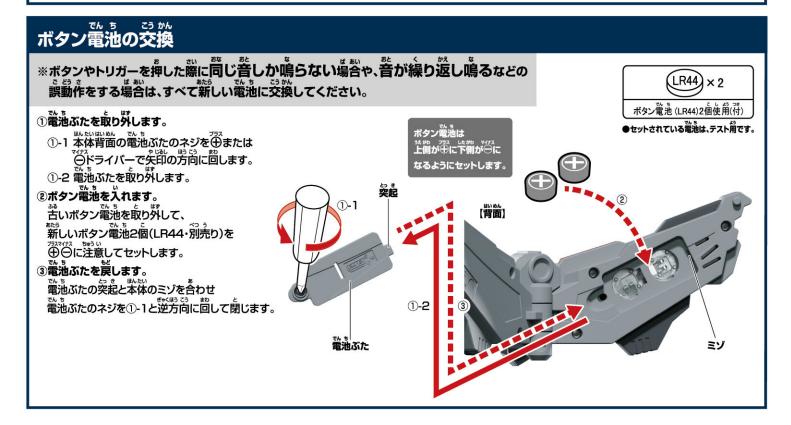

ウルトラゼロアイの<u>変形</u>

※セット内容の状態はゼロアイモードです。※ガンモードからゼロアイモードへの変形は逆の手順で行います。


ガンモード変形時には変形音が鳴ります。ゼロアイモード変形時にはウルトラゼロアイ出現音が鳴ります。

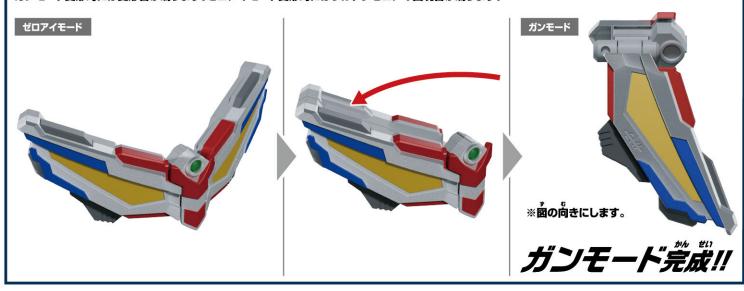

じゅうげき あそ **銃撃遊び** ※ガンモードで遊びます。

す 図のように持ち、トリガーを押すと銃撃音が鳴ります。

※ガンモードではトリガーを押した場合のみ音が鳴ります。 ***
ボタンを押しても音は鳴りません。

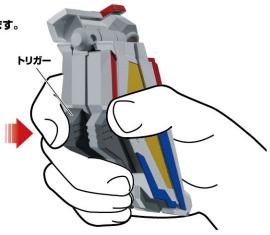


へかいか ひっさつ わざ あそ 変身と必殺技遊び ※ゼロアイモードで遊びます。

す 図のように持ち、ボタンを長押しすると変身音、

短押しすると必殺技音が鳴ります。

※ゼロアイモードではボタンを押した場合のみ音が鳴ります。

トリガーを押しても音は鳴りません。

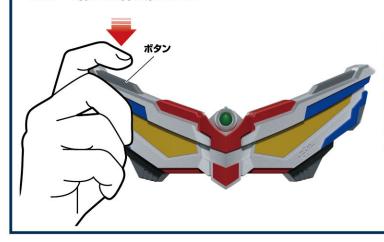

^{へんいぁそ} **変身遊び**

ボタンを長押しします。

へんしんまそ あんせいひょう じゅん →変身遊び 音声表の順に おんせい な 音声が鳴ります。

へいまる あれせいひょう 変身遊び 音声表

順番	おんせいないよう音声内容
1回目	~ いん おん 変身音①
2回目	~ いん おん 変身音②

まれる おんせい あと かい か ※最後の音声の後は1回目に 戻ります。

必殺技遊び

→必殺技遊び 音声表の順に おおばい な 音声が鳴ります。

必殺技遊び 音声表		
順番	おんせいないよう 音声内容	
かい め 1回目	エメリウムスラッシュ	
2回目	ウルトラゼロキック	
3回目	ウルトラマンゼロの掛け声	
4回目	ワイドゼロショット	
5回目	ゼロツインシュート	

さいで あんせい あと かいめ もど ※最後の音声の後は1回目に戻ります。



※サウンドグルトラなりきり※



How to Play



∕∖\ WARNING!

Caution: Keep batteries away from children.Batteries may be harmful if swallowed. NOTE: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable(nickel-cadmium) batteries. Dispose of used batteries properly. Remove batteries when not in use or discharged.

CAUTION! /!\

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio TV/technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

(Precautions for Use)

◆Plastic is the packaging material, please discard it after opening. ◆Do not place this product on resin sofas, cushions or tiles. Prolonged exposure may stain. ◆Do not forcibly pull or bend in the wrong direction for the movable part and the installation part. • Some pronunciations may be inconsistent in tones or difficult to hear due to product characteristics, please understand. •The attached button battery is for testing. If the sound becomes smaller, please replace the battery with a new one. •This product is composed of precise electronic parts. Do not let it drop, get wet with water, get rid of, or disintegrate. At the same time, please do not use or store in high and low temperature places. •May react to infrared remote control such as TV remote control. • Direct sunlight or fluorescent light may cause malfunction. •Low temperature may cause the stamp stand to fail to display the stamp pattern. You can leave the toy at room temperature to play later.

3+

MADE IN CHINA 2756291

Distributed by Bandai Namco Toys & Collectibles America Inc.,

23 Odyssey, Irvine, CA 92618. Phone: 949-262 4388
Actual size, color, style and decoration may vary. Used under license by Bandai. Bandai logo:

② & © 2025 Bandai. All Rights Reserved. Package:© 2025 Bandai. Used under authorization.

Require 2 x LR44(1.5V) Battery. Battery included.

Retain packaging and instruction as it contains important information





To Parents and Guardians

These are important precautions about using this product. Please read carefully and explain them to your child.





LR44

Uses two button batteries.

Before playing for the first time: How to remove the insulation sheet

Pull off the insulation sheet protruding from the back of the unit in the direction of the arrow.

→ A standby sound will play.



Replacing button batteries

*If pressing buttons or triggers only produces the same sound, or other malfunctions occur such as repeated sounds, replace all button batteries with new ones.


Adult assembly required.

- 1 Remove the battery cover.
 - ①-1 Turn the battery cover screw on the back of the main unit with a ⊕ or ⊖ pointed screwdriver in the direction of the arrow.
 - 1)-2 Remove the battery cover.
- 2 Insert the button batteries.

Remove the old button batteries and insert two new button batteries (LR44, sold separately), making sure the \oplus is the right way up.

3 Replace the battery cover.

Align the protrusion on the battery cover with the groove on the main unit, then turn the battery cover screw in the opposite direction of ①-1 to close it.

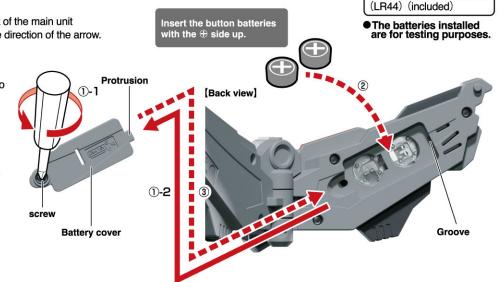


Ultra Zero Eye Transformation

- *The default mode of the set is Zero Eye Mode.
- *To transform from Gun Mode to Zero Eye Mode, follow the steps in reverse.

A transformation sound plays when transforming to Gun Mode.

An Ultra Zero Eye appearance sound plays when transforming to Zero-Eye Mode.

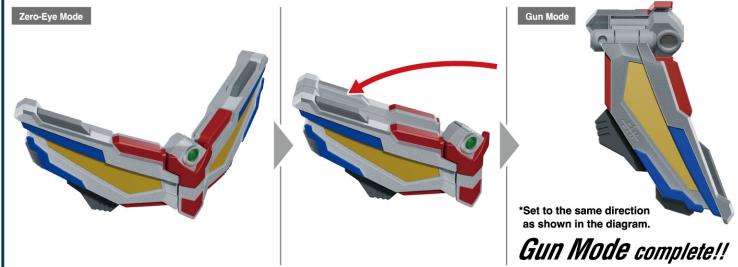

Shooting Play *Play in Gun Mode.

Hold as shown in the diagram and press the trigger to activate the gunshot sound.


*In Gun Mode, sound plays only when the trigger is pressed. Pressing the button does not activate sound.



Transformation and Special Move Play *Play in Zero Eye Mode.

Hold as shown in the diagram. Long-press the button to activate the transformation sound and short-press to activate the special move sound.

*In Zero Eye Mode, sound plays only when the button is pressed. Pressing the trigger does not activate sound.

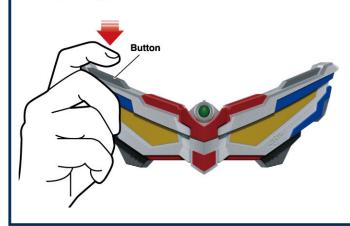

Transformation Play

Long-press the button.

→Sounds play in the order listed in the Transformation Play: Sound Table.

Transformation Play: Sound Table

Order	Sound Content	
1st	Transformation Sound ①	
2nd	Transformation Sound ②	

* After the last sound, it loops back to the first sound.

Special Move Play

Short-press the button.

⇒Sounds play in the order listed in Special Move Play: Sound Table.

Specia	I Move	Play:
Sound	Table	

Order	Sound Content
1st	Emerium Slash
2nd	Ultra Zero Kick
3rd	Ultraman Zero's Battle Cry
4th	Wide Zero Shot
5th	Zero Twin Shoot

* After the last sound, it loops back to the first sound.