

English version is below.



にぎって! プクミーブルーノ / ピンキー の遊び方

セット内容

にぎって! プクミーブルーノの場合

にぎって! プクミーブルーノ 本体...1



にぎって! プクミーピンクーの場合

にぎって! プクミーピンクー 本体...1



※取扱説明書は日本語版には
含まれておりません。

警告 (けいこく)

保護者の方へ 必ずお読みください。

●小部品があります。誤飲・窒息の危険がありますので、3才未満のお子様には絶対にお与えないでください。

注意 (ちゆうい)


●WEB取扱説明書を必ずお読みください。●本商品にはスピーカーを使用しておりますので、ペースメーカーをご使用の方はご注意ください。●ぶついたり、ふりまわすなど乱暴な遊びをしないでください。●単4乾電池(別売り)などの誤飲事故(特に3才未満のお子様)に注意してください。《電池を誤使用すると発熱・破裂・液漏れの恐れがあります。下記に注意してください》●二次電池(充電式電池)は、絶対に使用しないでください。●古い電池と新しい電池、いろいろな種類の電池を混ぜて使わないでください。●+- (プラスマイナス)を正しくセットしてください。●遊んだ後は必ずスイッチを切り電池をはずしてください。電池を入れたままにしておくと、液漏れの恐れがあり危険です。●ショートさせたり充電、分解、加熱、火の中に入れてたりしないでください。●万一、電池から漏れた液が目に入ったときはすぐに大量の水で洗い、医師に相談してください。皮膚や服に付いた時は水で洗ってください。●廃棄するときは、自治体の廃棄物処理の指示に従ってください。●電池の交換は保護者の方が行ってください。



《使用上の注意》●本商品は精密な電子部品で構成されています。落としたり、水にぬらしたり、汚したり、分解したりしないでください。また、高温・低温になる所での使用、保管はさけてください。●プラスチックは梱包材ですので開封後はすぐに捨ててください。●パッケージと本体を固定するパーツは回して外してください。●可動部分・取付部分を無理な方向に強く引っ張ったり、曲げたりしないでください。●本商品には塗装部分がありますので、保管の際には他のもの(樹脂製品や家具、ソファ等)と接触しないようにしてください。色が移る場合があります。●本体の軟質素材には塩化ビニルを使用しております。素材の特徴により表面が劣化したり、他素材に色が移る場合があります。予めご了承ください。●本体を直射日光に当てる等、本体を直射日光が当たる所や暖房器具の近くなど、高温の所や湿気が多い所に保管しないでください。保管状況により変色・変形したり劣化する恐れがあります。●発音の一部にイントネーションが違っていたり、商品の特性上聞き取りにくいものがありますが、ご了承ください。●本商品の音程は正確な音程とは異なります。



はじ あそ まえ かなら かく にん
●初めて遊ぶ前に必ずご確認ください。

あそ まえ かなら くろ き あつちようせい
・遊ぶ前には、必ず空気圧調整ネジ(Aネジ)をしめてから遊んでください。
 ネジが止まるまで回してしめてください。

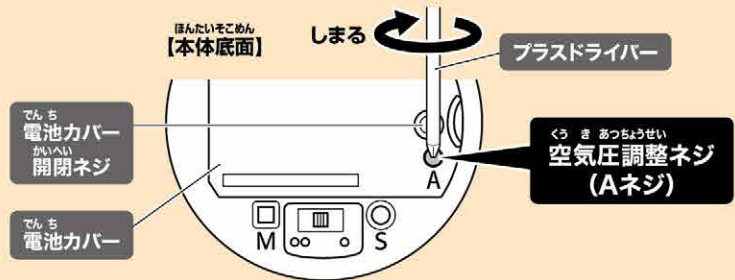

かく ぶ めいしよう でんげん い かつ
各部名称／電源の入れ方

※「にぎって!ブクミーブルーノ」を例に説明します。「にぎって!ブクミーピンキー」も同様です。

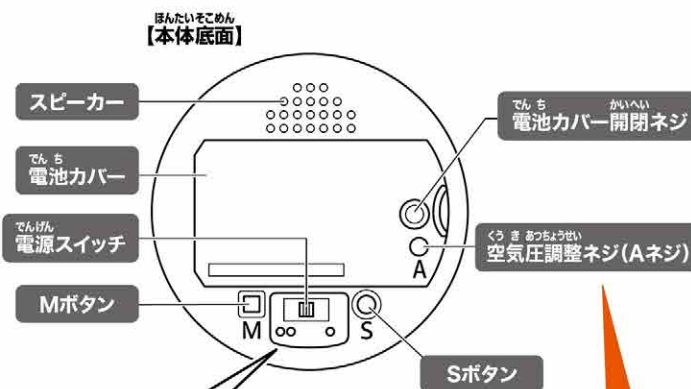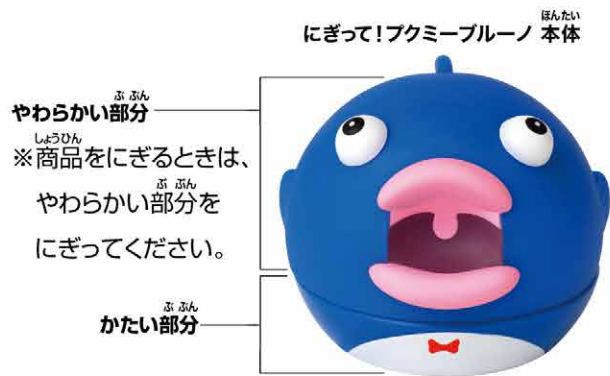

電源スイッチが中央にある状態は電源OFFです。

電源スイッチを「●●」の方向へ移動させると電源ON(音量大)

電源スイッチを「●」の方向へ移動させると電源ON(音量小)

空気圧調整方法


本体の空気圧を調整したい場合は、空気圧調整ネジ(Aネジ)をゆるめて空気圧の調整をしてください。

でんち こうかんほうほう
電池の交換方法

- ①本体底面の電池カバーを開けます。(プラスドライバーでネジをゆるめます。)
- ②単4乾電池(別売り)を3本セットします。「プラス(+)」[マイナス(-)]をよく確認して正しくセットしてください。
- ③電池カバーを元に戻して、しっかりネジをしめます。

注意

- 電池交換時には本体の電源スイッチをOFFにしてください。
- 電池は新品のアルカリ乾電池をご使用ください。
- 電池交換は保護者の方が行ってください。

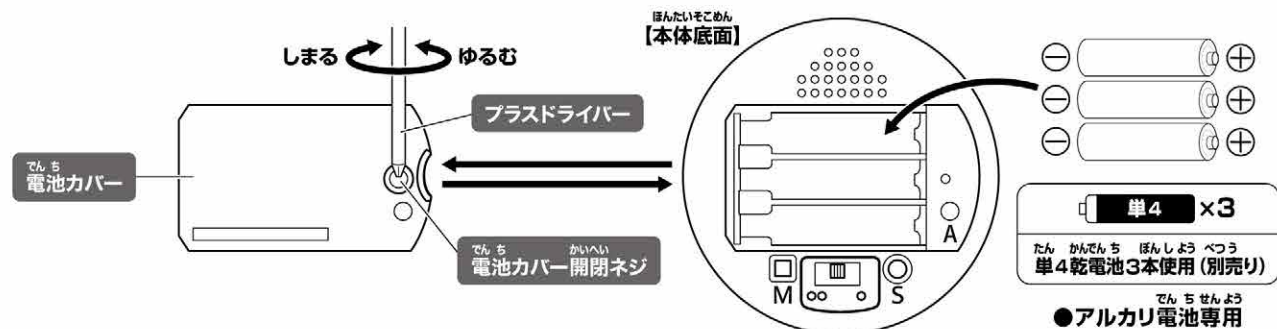

※画像と商品とは、多少異なりますのでご了承ください。
 ※画像はイメージです。

ちから ちようせい おと へんか たの
にぎる力を調整して、音の変化を楽しもう!

※本体のやわらかい部分はどこをにぎっても遊べます。



かん ど ちようせい ほう ほう
センサーの感度調整方法

にぎった時の、音の出かたを調整することができます。

底面の **Mボタン** + **Sボタン** を同時に2秒以上押すと、「パ」→「パ・パ・パ」→「パ・パ」の順番に音声が鳴ります。

※初期状態は「パ・パ」の場合に設定されています。

「パ」の場合

感度は「パ・パ」の時よりも低いので、「パ・パ」の時よりも強くにぎることでブクミーが反応するようになります。

「パ・パ・パ」の場合

感度は「パ・パ」よりも高いので、「パ・パ」の時よりも弱くにぎることでブクミーが反応するようになります。

「パ・パ」の場合

感度が高くなるので、少しにぎっただけでブクミーが反応するようになります。

※センサーの感度調整を変更するときは、やわらかい部分をにぎったり、押さないように注意してください。

やわらかい部分をにぎってセンサーが反応している状態では、感度調整することはできません。

※上記設定は電源スイッチをOFFにしても、電池を抜いてもそのまま本体に記録されます。

※上記の設定変更は何度でも変更できます。

スリープモード

約3分間何も操作をしないと、自動的にスリープモードに移行します。

Mボタン または **Sボタン** を押すか、

電源スイッチ をOFFにしてから、再度 **電源スイッチ** をONに入ると、スリープモードが解除され、再び遊べるようになります。

※スリープモード状態では商品にぎっても何も反応しません。

モードの切り替え方(以下の4モードがあります。)

1 電源スイッチON/スクリーンモード

電源スイッチON

「ハロープクミー」という音声が鳴り、スクリーンモードがスタートします。



スクリーンモード：プクミーをにぎって、全6種類のセリフのトーンを変化させて遊ぶモード

6種類のセリフがランダムで遊べるモードと、セリフを1種類ずつ選択して遊べるモードがあります。

※詳細は5ページをご覧ください。

2 ドレミモード

Mボタンを押します

スクリーンモード中にMボタンを押すと「パー」という音声が鳴り、ドレミモードへ移行します。



ドレミモード：プクミーをにぎる強さを調整して、ドレミの音階を奏でて遊ぶモード

音階の幅を1オクターブと2オクターブの2段階から選んで遊ぶことができます。

さらに、2オクターブの遊びはビブラートの有り無しが選べます。

※詳細は6ページをご覧ください。 ※本商品の音程は正確な音程とは異なります。

3 メロディモード

Mボタンを押します

ドレミモード中にMボタンを押すとメロディが流れ、メロディモードへ移行します。



メロディモード：プクミーをにぎって、簡単に演奏遊びができるモード

全11曲のメロディ遊びが楽しめます。

プクミーをにぎるたびに自動でメロディが進むので、簡単に演奏遊びができます。

※にぎって!プクミーブルーノとにぎって!プクミーピンキーでは、全11曲のメロディのうち、8曲分は共通のメロディが収録されており、残りの3曲はそれぞれの商品にしか収録されていません。

※詳細は7ページをご覧ください。 ※本商品の音程は正確な音程とは異なります。

4 ゲームモード

Mボタンを押します

メロディモード中にMボタンを押すと「ゲームワン」という音声が鳴り、ゲームモードへ移行します。



ゲームモード：プクミーをにぎって、複数人でゲーム遊びができるモード

複数人でも遊べるゲームモードを2種類搭載。順番にプクミーをにぎって遊ぶことができます。

※詳細は9ページをご覧ください。

ゲームモード中に Mボタン を押すと、「ハロープクミー」という音声が鳴り、スクリーンモードに戻ります。

スクリーンモードの遊び方

電源スイッチ をONにすると、「ハロープクミー」という音声^{おんせい}が鳴り、スクリーンモードがスタートします。



スクリーンモード：プクミーをにぎって、全6種類のセリフのトーンを変化させて遊ぶモード

6種類のセリフがランダムで遊べるモードと、セリフを1種類ずつ選択して遊べるモードがあります。

電源をONにして何もボタンを押さずに
プクミーをにぎると…

にぎるたびに6種類のセリフがランダムで流れます。
プクミーをにぎる強さを調整してセリフのトーンを変化させよう!

スクリーンモード中に
Sボタン:1回目

「プクミー!」というセリフが流れます。
プクミーをにぎる強さを調整して「プクミー!」というセリフのトーンを変化させよう!

スクリーンモード中に
Sボタン:2回目

「アハハ!」という笑い声が流れます。
プクミーをにぎる強さを調整して「アハハ!」という笑い声のトーンを変化させよう!

スクリーンモード中に
Sボタン:3回目

「チュキー!」というセリフが流れます。
プクミーをにぎる強さを調整して「チュキー!」というセリフのトーンを変化させよう!

スクリーンモード中に
Sボタン:4回目

「アゲー!」というセリフが流れます。
プクミーをにぎる強さを調整して「アゲー!」というセリフのトーンを変化させよう!

スクリーンモード中に
Sボタン:5回目

「イエーッ!」というセリフが流れます。
プクミーをにぎる強さを調整して「イエーッ!」というセリフのトーンを変化させよう!

スクリーンモード中に
Sボタン:6回目

「キモチイ!」というセリフが流れます。
プクミーをにぎる強さを調整して「キモチイ!」というセリフのトーンを変化させよう!

スクリーンモード中に
Sボタン:7回目

「ハロープクミー!」という音声^{おんせい}が鳴り、スクリーンモードのスタートに戻ります。
にぎるたびに6種類のセリフがランダムで流れるモードからスタートします。

スペシャル機能! プクミーを連続50回にぎってみよう!

Sボタン を押さずに、50回分プクミーをにぎって遊ぶと、50回目以降はにぎるたびに「オナラ」の音が鳴ります。

※ Sボタン または Mボタン を押すと「オナラ」の音は鳴らなくなり、次の遊びができるようになります。

あそ かた ドレミモードの遊び方

スクリーンモード中に **Mボタン** を押し、「パー」という音声が鳴り、ドレミモードへ移行します。

ドレミモード：ブクミーをにぎる強さを調整して、ドレミの音階を奏でて遊ぶモード



音階の幅を1オクターブと2オクターブの2段階から選んで遊ぶことができます。

さらに、2オクターブの遊びはビブラート(震えたような音)の有り無しが選べます。

モードのはじめは1オクターブでのドレミ遊びが楽しめます。

※本商品の音程は正確な音程とは異なります。

①

1オクターブの
ドレミ遊び

1オクターブのドレミ遊びでは、ブクミーをにぎって音階を1オクターブ分変化させることができます。
以下の手順でドレミモードを遊んでください。

1. ブクミーを優しくにぎって「パー」の音を出してみましょう。
2. 「パー」の音が出たら、にぎる強さを調整して音階を変化させてください。
3. にぎる強さの調整になれてきたら、「ド」→「レ」→「ミ」→「ファ」→「ソ」→「ラ」→「シ」→「ド」の順番に、1オクターブ分のドレミの音階変化にチャレンジしてみましょう。

動画でドレミモードの遊び方を確認できます。

<https://youtu.be/AUkqeO-HCNA>

②

2オクターブの
ドレミ遊び

1オクターブのドレミ遊びの状態 で **Sボタン** を押し、
高い音で「パー」という音声が鳴り、2オクターブのドレミ遊びが楽しめます。

2オクターブのドレミ遊びでは、ブクミーをにぎって音階を2オクターブ分変化させることができます。
「ド」→「レ」→「ミ」→「ファ」→「ソ」→「ラ」→「シ」→「ド」→「レ」→「ミ」→「ファ」→「ソ」→「ラ」→「シ」→「ド」の順番に、
2オクターブ分のドレミの音階変化にチャレンジしてみましょう。
音階の調整が上手にできるようになれば、ブクミーをにぎって好きな曲を演奏することもできます。

③

2オクターブ
+
ビブラートの
ドレミ遊び

2オクターブのドレミ遊びの状態 で、 **Sボタン** を押し、高い音にビブラート(震えたような声)で
「パ〜」という音が鳴り、2オクターブ + ビブラートのドレミ遊びが楽しめます。

2オクターブ + ビブラートのドレミ遊びでは、「パ〜」というビブラートがかかったような
震えた音で2オクターブ分の音階変化を楽しめます。2オクターブの音階変化に加え、
ビブラートもきいているので、好きな曲を演奏する際にもアレンジの幅が広がります。

①に戻る

Sボタンを押し「パー」という音声が鳴り、「①1オクターブのドレミ遊び」に戻ります。

メロディモードの遊び方

ドレミモード中に **Mボタン** を押すと、「幸せなら手をたたこう」のメロディの冒頭が流れ、メロディモードへ移行します。

メロディモード：プクミーをにぎって、簡単に演奏遊びができるモード



全11曲のメロディ遊びが楽しめます。プクミーをにぎるたびに自動でメロディが進むので、簡単に演奏遊びができます。最初の1曲目は「幸せなら手をたたこう」からスタートします。

※にぎって!プクミーブルーノとにぎって!プクミーピンキーでは、全11曲のメロディのうち、8曲分は共通のメロディが収録されており、残りの3曲はそれぞれの商品にしか収録されていません。
※本商品の音程は正確な音程とは異なります。

にぎって!プクミーシリーズに収録されている全てのメロディの楽譜を収録しています。楽譜にそってプクミーをにぎると、プクミーが自動で音階を調整するので簡単にメロディを奏でることができます。

1曲目 (共通収録曲) **「幸せなら手をたたこう」**
URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_1.pdf

※ **Sボタン** を押すと、「運命」の冒頭のメロディが流れるので、楽譜を見ながら「運命」を演奏してみよう!

2曲目 (共通収録曲) **「運命」**
URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_2.pdf

※ **Sボタン** を押すと、「結婚行進曲」の冒頭のメロディが流れるので、楽譜を見ながら「結婚行進曲」を演奏してみよう!

3曲目 (共通収録曲) **「結婚行進曲」**
URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_3.pdf

※ **Sボタン** を押すと、「キラキラ星」の冒頭のメロディが流れるので、楽譜を見ながら「キラキラ星」を演奏してみよう!

4曲目 (共通収録曲) **「キラキラ星」**
URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_4.pdf

※ **Sボタン** を押すと、「大きな古時計」の冒頭のメロディが流れるので、楽譜を見ながら「大きな古時計」を演奏してみよう!

5曲目 (共通収録曲) **「大きな古時計」**
URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_5.pdf

※ **Sボタン** を押すと、「静かな湖畔」の冒頭のメロディが流れるので、楽譜を見ながら「静かな湖畔」を演奏してみよう!

6曲目 (共通収録曲) **「静かな湖畔」**
URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_6.pdf

※次のページへ続きます。

メロディモードの遊び方(続き)

※メロディモードの収録曲は9曲目以降は商品によって異なります。

※ **Sボタン** を押すと、「ジングルベル」の冒頭のメロディが流れるので、楽譜を見ながら「ジングルベル」を演奏してみよう!

きよめ
7曲目
(共通収録曲)

「ジングルベル」

URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_7.pdf

※ **Sボタン** を押すと、「よろこびの歌(ベートーベン交響曲第9番)」の冒頭のメロディが流れるので、楽譜を見ながら「よろこびの歌(ベートーベン交響曲第9番)」を演奏してみよう!

きよめ
8曲目
(共通収録曲)

「よろこびの歌(ベートーベン交響曲第9番)」

URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_8.pdf

にぎって!プクミーブルーノのみ : ※ **Sボタン** を押すと、「ピクニック(イギリス民謡「丘を越えてゆこうよ」)」の冒頭のメロディが流れるので、楽譜を見ながら「ピクニック(イギリス民謡「丘を越えてゆこうよ」)」を演奏してみよう!

にぎって!プクミーピンクのみ : ※ **Sボタン** を押すと、「ネコふんじゃった」の冒頭のメロディが流れるので、楽譜を見ながら「ネコふんじゃった」を演奏してみよう!

きよめ
9曲目
(にぎって!プクミーブルーノのみ収録曲)

「ピクニック(イギリス民謡「丘を越えてゆこうよ」)」

URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_9.pdf

きよめ
9曲目
(にぎって!プクミーピンクのみ収録曲)

「ネコふんじゃった」

URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_10.pdf

にぎって!プクミーブルーノのみ : ※ **Sボタン** を押すと、「一週間」の冒頭のメロディが流れるので、楽譜を見ながら「一週間」を演奏してみよう!

にぎって!プクミーピンクのみ : ※ **Sボタン** を押すと、「おもちゃのチャチャチャ」の冒頭のメロディが流れるので、楽譜を見ながら「おもちゃのチャチャチャ」を演奏してみよう!

きよめ
10曲目
(にぎって!プクミーブルーノのみ収録曲)

「一週間」

URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_11.pdf

きよめ
10曲目
(にぎって!プクミーピンクのみ収録曲)

「おもちゃのチャチャチャ」

URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_12.pdf

にぎって!プクミーブルーノのみ : ※ **Sボタン** を押すと、「きよしこの夜」の冒頭のメロディが流れるので、楽譜を見ながら「きよしこの夜」を演奏してみよう!

にぎって!プクミーピンクのみ : ※ **Sボタン** を押すと、「蛍の光」の冒頭のメロディが流れるので、楽譜を見ながら「蛍の光」を演奏してみよう!

きよめ
11曲目
(にぎって!プクミーブルーノのみ収録曲)

「きよしこの夜」

URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_13.pdf

きよめ
11曲目
(にぎって!プクミーピンクのみ収録曲)

「蛍の光」

URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_14.pdf

メロディモード11曲目の状態、**Sボタン** を押すと、メロディモード1曲目に戻ります。

ゲームモードの遊び方

メロディモード中に **Mボタン** を押し、「ゲームワン」の音声が鳴り、ゲームモードへ移行します。



ゲームモード： プクミーをにぎって、複数人でゲーム遊びができるモード

複数人でも遊べるゲームモードを2種類搭載。順番にプクミーをにぎって遊ぶことができます。最初はゲーム1(かいだんゲーム)からスタートします。

ゲーム1(かいだんゲーム)の遊び方

プクミーを限界までにぎって、「ダメー!!!」と叫ばせてしまった人が負けです。下の手順で遊んでみましょう!

- 1 プクミーをにぎると、「パ～」という音が鳴ります。好きなだけにぎったあとで、次の人にプクミーを手渡しましょう。
- 2 プクミーをにぎればにぎるほど、「パ～」の音が段々高くなっていきます。
- 3 「パ～」の音の高さがある一定の高さになると、プクミーが「ダメー!!!」と叫びます。
- 4 自分の順番の時にプクミーをにぎったタイミングで「ダメー!!!」と叫ばせてしまった人が負けです。
※プクミーが「ダメー!!!」と叫ぶタイミングは毎回ランダムで変わります。

ゲーム1の途中で **Sボタン** を押し、「ゲームツー」という音声が鳴り、ゲーム2(29ゲーム)の遊びに移行します。

動画でゲーム1(かいだんゲーム)の遊び方を確認できます。▶▶▶ <https://youtu.be/ZSUN80VjgmE>

ゲーム2(29ゲーム)の遊び方

「ゲームツー」という音声が鳴ると、ゲーム2(29ゲーム)がスタートします。プクミーを29回目ににぎって「ダメー!!!」と叫ばせてしまった人が負けです。下の手順で遊んでみましょう!

- 1 プクミーを1回にぎると「アゲー!」という音が鳴ります。
1人1回～3回までプクミーをにぎって、次の人にプクミーを手渡しましょう。
- 2 次の人も1回～3回プクミーをにぎって、次の人にプクミーを手渡しましょう。
- 3 29回目にプクミーをにぎると、プクミーが「ダメー!!!」と叫びます。
- 4 プクミーを29回目ににぎって、「ダメー!!!」と叫ばせてしまった人が負けです。

ゲーム2の途中で **Sボタン** を押し、ゲーム1(かいだんゲーム)に戻ります。

動画でゲーム2(29ゲーム)の遊び方を確認できます。▶▶▶ https://youtu.be/WGq7_3JTidk

故障かなと思ったら…

本体をにぎっても音が出ない

1. スリープモードの可能性が**あります**。
→ 3ページのスリープモードをご確認ください。
2. MまたはSボタンを押しても音が出ない。または電源スイッチをOFFにしてからONに戻しても音が出ない。
→ 電池切れの可能性が**あります**。2ページの電池の交換方法を確認して電池の交換を行ってください。
3. 電池を交換したのに、にぎっても音が出ない。
→ バンダイお客様相談センターにお問い合わせください。

本体の空気が抜けている、または空気が漏れている気がする

1. 空気圧調整ネジ(Aネジ)が開いたまま、またはゆるくなっている**可能性が**あります****。
→ 2ページの「初めて遊ぶ前に必ずご確認ください。」をよく読み、空気圧調整ネジ(Aネジ)がしまっていることを確認してください。
2. 空気圧調整ネジ(Aネジ)をしめたのに、空気漏れが**な**お**らない**。
→ バンダイお客様相談センターにお問い合わせください。

本体の空気が少なくなって、にぎり心地が悪くなった

1. 本体の空気圧が弱くなっている**可能性が**あります****。
→ 2ページの空気圧調整方法を確認してください。
2. 空気圧の調整を行い、空気圧調整ネジ(Aネジ)をしめたのに、にぎり心地が**悪い**。
→ バンダイお客様相談センターにお問い合わせください。

本体をとても強くにぎらないと高い音がでない、または本体を弱くにぎったのに簡単に高い音が出る

1. 強くにぎらないと高い音が出ない場合は、センサーの感度が弱いの**か**も**しれません**。
→ 3ページのセンサーの感度調整方法を確認して、感度を強くしてください。
2. 弱くにぎったのに、簡単に高い音が出る場合は、センサーの感度が強い**か**も**しれません**。
→ 3ページのセンサーの感度調整方法を確認して、感度を弱くしてください。

電源スイッチをONにした状態で、何も触っていないのに勝手に音が出る

1. 天候や高度変更による気圧の変化で、本体の空気圧が**変化**した**可能性が**あります****。
→ 2ページの空気圧調整方法を確認して、空気圧の調整を行ってください。
2. 空気圧の調整を行い、空気圧調整ネジ(Aネジ)をしめたのに、勝手に音が出る。
→ バンダイお客様相談センターにお問い合わせください。



〈お問い合わせ先〉バンダイお客様相談センター
<https://www.bandai.co.jp/support/top>
ナビダイヤル 0570-041-101
受付10時～16時(土日祝日、当社指定休業日を除く)
海外からの問い合わせは受け付けておりません。
Customer service inquiries are not accepted from outside Japan.

〈商品送付先〉バンダイ 栃木配送センター
〒321-0298
栃木県下都賀郡壬生町おもちゃのまち4-2-20
電話番号はお客様相談センター共通

発売元

株式会社バンダイ
東京都台東区駒形1-4-8 〒111-8081

BANDAI CO.,LTD.
1-4-8, Komagata, Taito-ku, Tokyo, 111-8081 Japan



How to play SqueemieWow! Bruno/Pinky

Contents

SqueemieWow! Bruno

SqueemieWow! Bruno Product...1



SqueemieWow! Pinky

SqueemieWow! Pinky Product...1




*Not includes paper instruction manual.

WARNING:
CHOKING HAZARD- Small parts. Not for children under 3 years.



BANDAI S.A.S
15 Rue Felix Mangini
69009 Lyon, France

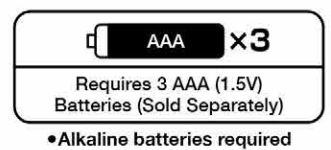

In order to protect the environment, please do not dispose of this product with your household waste. Please dispose of it at a designated collection facility in your area.

WARNING! Not suitable for children under 3 years. Small parts. Choking hazard. Use under adult supervision. Colours, contents and decoration of contents may vary. Not all products may be available in your country. Retain packaging and instruction as it contains important information. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of a recommended type or similar type shall be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. Supervise children if they are replacing batteries themselves to ensure these guidelines are followed. Store unused batteries in their packaging and away from metal objects which can cause a short-circuit. Caution: Keep batteries away from children. Batteries may be harmful if swallowed. Manufactured in China. Distributed by: Bandai Namco Toys & Collectibles America Inc. 23 Odyssey, Irvine, CA 92618. Actual size, color, style and decoration may vary. Retain packaging and instruction as it contains important information. Bandai logo: © 2024 Bandai. All Rights Reserved. Package: © 2024 BANDAI.

1 CAUTION

- For ages 6 and up.
- Please note that the product may differ slightly from images in the instruction manual.
- Images are for illustrative purposes only.
- Choking Hazard: Contains small parts. Do not give to children under 3 years of age.
- Please read this instruction manual in its entirety before use.
- Please refrain from using this product if you have a pacemaker, as it contains speakers, magnets, and other electronic components.
- The misuse of the batteries may cause overheating, battery rupture, combustion, or leakage. Please note the following:
- Be mindful that short-circuiting can lead to dangerously high electrical currents. It is imperative to take measures to avoid them in all circumstances.
- If the product gets wet, stop using it immediately, as it may short-circuit.
- Do not place the product in water, expose to fire, disassemble, or solder.
- Do not use or store the product near an open flame or in high temperature or humid places.
- When disposing of the batteries, follow the disposal regulations of your local government. Do not place the product in water or operate with wet hands, as this could lead to damage. Additionally, avoid using or storing the product in locations with high humidity. The product image is for illustrative purposes only. Actual product may vary. **WARNING!** Not suitable for children under 3 years. Contains small parts that pose a choking hazard. Use under adult supervision. Some products may not be available in your country. Do not dispose of the packaging and instruction manual, as they contain important information. Misuse of batteries may cause overheating, rupture, combustion, or leakage. Please note the following: Remove the battery and stop use of the product if the product is hot, has an unusual odor, warps, emits visible smoke, or if any other anomalies are detected during use. Only use batteries that were packaged with the product. Do not use the product in cold temperatures. The cold may affect the batteries and prevent proper function of the product. Do not drop, spill water, dirty or dismantle the product. Ensure to prevent damage to or entry of any foreign object into the battery box.

2 PRECAUTIONS FOR USE

- Plastic packaging materials should be discarded immediately after opening.
- Do not store this product on plastic, sofas, seats, tiles, etc. Prolonged contact may cause discoloration.
- Do not roughly pull or bend the moving or mounted parts in unintended directions.
- This product is composed of precision electronic parts. Do not drop, soak, soil, or disassemble. Avoid using or storing the product in high or low temperatures.
- Replace the batteries in cases of malfunction.

3 DISCLAIMER

Please read the instruction manual carefully before use. This product uses built-in speakers. Please be advised if you have a pacemaker.

Please do not aggressively play with the product, such as by hitting it or throwing it around.

Misuse of batteries may cause overheating, ruptures, or leakage. Please be aware of the following:

- This product is composed of precision electronic parts. Do not drop, soak, soil, or disassemble. Avoid using or storing the product in high or low temperatures.
- Discard plastic packaging immediately after opening.
- Remove the parts that secure the package and the product.
- Do not roughly pull or bend the moving or mounted parts in unintended directions.
- Do not store this product on top of plastic, sofas, seats, tiles, etc. Prolonged contact may cause discoloration.

Please note that this product uses vinyl chloride as part of its soft material. Due to the characteristics of the material, the surface may deteriorate, or the color may bleed onto other surfaces. Do not store the product in high temperature or humid areas, near heating devices, or where it is exposed to direct sunlight. Depending on the storage conditions, it may lead to discoloration, deformation, or deterioration. Please note that some of the pronunciations' intonations may be different and difficult to hear due to the characteristics of the product. The product may be out of tune.

4 OTHER NOTES

- When equipped with medical electronic devices, or when using medical electronic equipment other than implantable devices during home recuperation, please confirm the effect of radio waves with the medical device manufacturer or distributor before using this product.

5 FCC Statement

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio TV / technician for help. Bandai Namco Toys & Collectibles America Inc. 23 Odyssey, Irvine, CA 92618 Phone: 949-262 4388


**WARNING
FOR BATTERY**
Alkaline batteries required.

- Do not use rechargeable batteries.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Insert the batteries correctly according to the plus and minus symbols.
- After playing, be sure to turn off the switch and take out the batteries. Leaving batteries in may risk leakage.
- Do not short-circuit, charge, disassemble, heat, or burn.
- If the liquid from the battery gets into your eye, immediately flush your eye with water and consult a doctor.
- If the liquid gets onto your skin or clothes, wash with water.
- When disposing of the batteries, follow the disposal regulations of your local government.
- Replacement of batteries should be performed by a parent or guardian.
- Please also "Replace battery" when you can not play completely or see something wrong.

● Please read the following carefully before playing for the first time.

• Be sure to tighten the air pressure adjustment screw before playing.

Tighten the screw until it is completely secured in place.

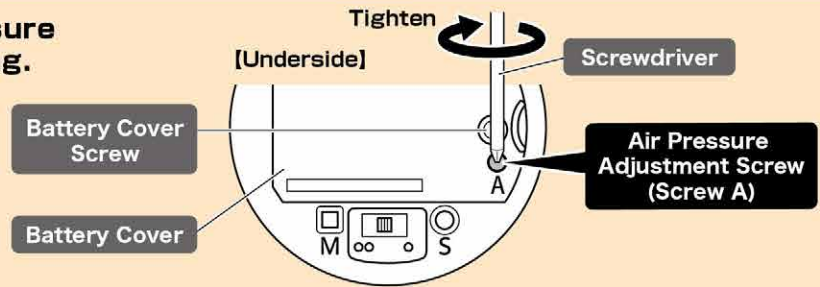

Part Names/How to Turn On


*The following is explained using SqueemieWow!Bruno. This also applies to SqueemieWow!Pinky.

Soft Part

*Only squeeze the soft part of this product.



Solid Part

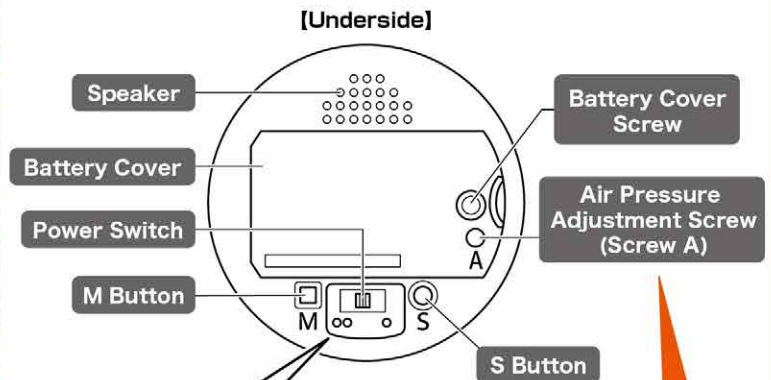

The middle position is OFF.

ON ← OFF → ON

Moving the power switch towards "●●" will turn the power on. (High Volume)



Moving the power switch towards "●" will turn the power on. (Low Volume)

How to Adjust Air Pressure


If you want to adjust the air pressure of the product, unscrew the air pressure adjustment screw (Screw A) and adjust accordingly.

How to replace the battery

- ① Open battery cover located on underside of product. Unscrew the screw with a screwdriver.
- ② Requires 3 AAA Batteries. Insert the batteries, making sure to match up the plus (+) and minus (-) signs.
- ③ Place the cover back on and tighten the screw.

CAUTION

- Please turn off the switch before replacing the battery.
- Please use new Alkaline batteries.
- Replacement of batteries should be performed by a parent or guardian.

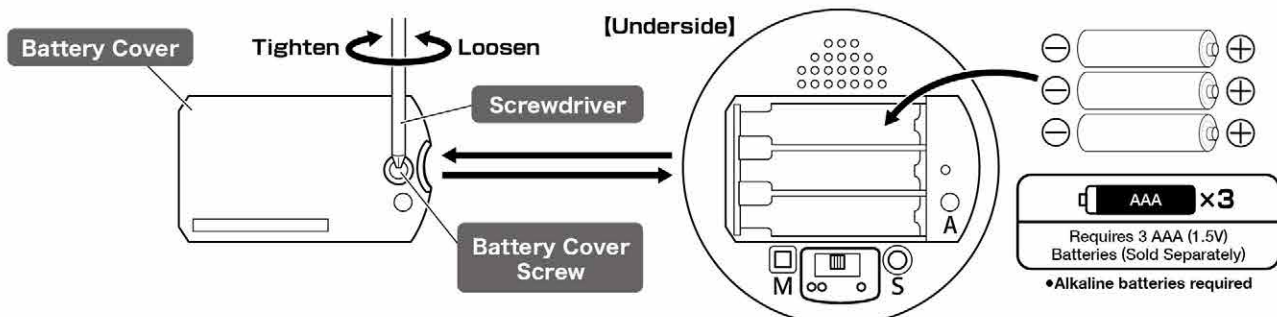

How to play

*The following is explained using SqueemieWow!Bruno.
This also applies to SqueemieWow!Pinky.

Have fun with all kinds of sounds by changing your grip strength!

*Squeeze any soft part of the product to play.



How to Adjust Sensor Sensitivity

You can also change how the sound comes out when you squeeze it.

Pressing the M and S button on the bottom simultaneously for more than 2 seconds will make either "Pa", "Pa Pa", or "Pa Pa Pa" sounds.

*SqueemieWow! is set to the "Pa Pa" by default.

"Pa" Sound

.....
The sensitivity is lower than "Pa Pa", so it will require the strongest grip strength to adjust the change in sound.

"Pa Pa Pa" Sound

.....
The sensitivity is even higher than "Pa Pa", so it will require less grip strength than "Pa Pa" for SqueemieWow! to react.

"Pa Pa" Sound

.....
The sensitivity is set to high, so SqueemieWow! will react even if you squeeze just a little bit.

*When adjusting the sensor sensitivity settings, do not squeeze or press the soft part of the product. The sensitivity settings cannot be adjusted while the soft part of the product is being squeezed and the sensor is active.

*The above settings are preserved even if the product is switched off or the batteries are taken out.

*The above settings can be changed any number of times.

Sleep Mode

If you don't interact with SqueemieWow! for about 3 minutes, it will automatically switch to Sleep Mode.

To deactivate Sleep Mode and play with SqueemieWow! again, press the M button or the S button, or turn the power switch to OFF and then ON again.

*SqueemieWow! will not react during Sleep Mode even if you squeeze the product.

How to select 4 MODES

1 Power On/Scream Mode

Power On

The start-up phrase "Squeeze Me" will play, and Scream Mode will start.



Scream Mode:

A game mode where you can have fun changing the pitch of 6 different phrases by squeezing SqueemieWow!

Play in two different modes: one where 6 different phrases are chosen randomly, and another where you can choose each phrase individually.

*Please refer to page 5 for more details.

2 Do-Re-Mi Mode

Press the M button

If you press the M button during Scream Mode, the sound "Pa" will play, and you will switch to Do-Re-Mi Mode.



Do-Re-Mi Mode:

Play musical notes by changing your grip strength

You can choose to play with either one octave or two octaves.

Additionally, you can choose to play with or without vibrato (wavering pitch) when playing with two octaves.

*Please refer to page 6 for more details.

*The sounds of this product may differ from the exact pitches.

3 Melody Mode

Press the M button

If you press the M button during Do-Re-Mi Mode, a melody will play, and you will switch to Melody Mode.



Melody Mode:

A game mode where you can easily play melodies by squeezing SqueemieWow!

Have fun with 11 different melodies!

The next part of the melody will automatically play each time you squeeze

SqueemieWow!, so you can have fun easily playing music.

*In SqueemieWow!Bruno and SqueemieWow!Pinky, 8 out of 11 songs are included in both products. The remaining 3 songs are unique to each version of the product.

*Please refer to page 7 for more details.

*The sounds of this product may differ from the exact pitches.

4 Game Mode

Press the M button

If you press the M button during Melody Mode, the phrase "Game One" will play, and you will switch to Game Mode.



Game Mode:

A game mode where you can have fun squeezing SqueemieWow! with others!

Play with others in 2 different game modes where you have fun by taking turns squeezing SqueemieWow!.

*Please refer to page 9 for more details.

If you press the M button during Game Mode, the phrase "Squeeze Me" will play, and SqueemieWow! will return to Scream Mode.

How to play Scream Mode

After turning the power on, the start-up phrase "Squeeze Me" will play, and Scream Mode will start.



Scream Mode:

A game mode where you can have fun changing the pitch of 6 different phrases by squeezing SqueemieWow!

Play in two different modes: one where 6 different phrases are chosen randomly, and another where you can choose each phrase individually.

If you turn SqueemieWow! on and squeeze without pressing any buttons...

Every time you squeeze, a random phrase out of 6 different phrases will play. Adjust your grip strength to alter the pitch of each phrase!

Pressing S button during Scream Mode: 1st time

The phrase "Squeel!" will play. Adjust your grip strength to hear different pitches of the phrase!

Pressing S button during Scream Mode: 2nd time

The phrase "Hahahaha!" will play. Adjust your grip strength to hear different pitches of the phrase!

Pressing S button during Scream Mode: 3rd time

The phrase "Chukiii!" will play. Adjust your grip strength to hear different pitches of the phrase!

Pressing S button during Scream Mode: 4th time

The phrase "Again!" will play. Adjust your grip strength to hear different pitches of the phrase!

Pressing S button during Scream Mode: 5th time

The phrase "Yeah!" will play. Adjust your grip strength to hear different pitches of the phrase!

Pressing S button during Scream Mode: 6th time

The phrase "Kimochoiii!" will play. Adjust your grip strength to hear different pitches of the phrase!

Pressing S button during Scream Mode: 7th time

The phrase "Squeeze me!" will play, and SqueemieWow! will return to Scream mode. A mode will start where a random phrase out of 6 will play every time you squeeze.

Special feature! Try squeezing SqueemieWow! 50 times in a row!

If you squeeze SqueemieWow! 50 times without pressing the S button, SqueemieWow! will "Fart" every time you squeeze from the 50th time onward.

*Pressing the S or M button will disable the fart sound and allow you to play other modes.

How to play Do-Re-Mi Mode

If you press the M button during Scream Mode, the sound “Pa” will play, and you will switch to Do-Re-Mi Mode.



Do-Re-Mi Mode:

Play musical notes by changing your grip strength



You can choose to play with either one octave or two octaves. Additionally, you can choose to play with or without vibrato (wavering pitch) when playing with two octaves. The mode will start in One Octave Do-Re-Mi Mode.

*The sounds of this product may differ from the exact pitches.

1

One Octave Do-Re-Mi Mode

In One Octave Do-Re-Mi Mode, you can have fun changing the pitches across one octave by squeezing SqueemieWow!. Please follow the instructions below on how to play in Do-Re-Mi mode.

1. Gently squeeze SqueemieWow! and try to make a “Pa” sound.
2. After making the “Pa” sound, adjust your grip strength to change the note's pitch.
3. After getting used to adjusting your grip strength, see if you can challenge yourself and make the “Do” → “Re” → “Mi” → “Fa” → “So” → “La” → “Ti” → “Do” sounds in order.

Check out the video for more details on how to play in Do-Re-Mi mode.



https://youtu.be/YQHJo_T1uf8

2

Two Octave Do-Re-Mi Mode

If you press the S button during One Octave Do-Re-Mi Mode, a high-pitched “Pa” sound will play, and Two Octave Do-Re-Mi Mode will start.

In Two Octave Do-Re-Mi Mode, you can have fun changing the pitches across two octaves by squeezing SqueemieWow!.

Challenge yourself and see if you can make the “Do” → “Re” → “Mi” → “Fa” → “So” → “La” → “Ti” → “Do” → “Re” → “Mi” → “Fa” → “So” → “La” → “Ti” → “Do” sounds in order across two octaves.

When you get better at controlling the sounds, you can even try playing your favorite songs by squeezing SqueemieWow!.

3

Two Octave + Vibrato Do-Re-Mi Mode

If you press the S button during Two Octave Do-Re-Mi Mode, a high-pitched vibrato (wavering pitch) “Paa” will play, and Two Octave + Vibrato Do-Re-Mi Mode will start.

In Two Octave + Vibrato Do-Re-Mi Mode, you can play across two octaves of “Paa” sounds with a vibrato effect. The combination of two octaves and vibrato means that you can enjoy a wider range of sounds to choose from when playing your favorite songs.

Return to 1

Pressing the S button will make the “Pa” sound, and SqueemieWow! will return to One Octave Do-Re-Mi Mode.

How to play Melody Mode

If you press the M button during Do-Re-Mi Mode, the opening melody of “If You're Happy and You Know It” will play, and you will switch to Melody Mode.



Melody Mode:

A game mode where you can easily play melodies by squeezing SqueemieWow!



Have fun with 11 different melodies! The next part of the melody will automatically play each time you squeeze SqueemieWow!, so you can have fun easily playing music.

This mode starts with Song 1, “If You're Happy and You Know It”.

*In SqueemieWow! Bruno and SqueemieWow! Pinky, 8 out of 11 songs are included in both products. The remaining 3 songs are unique to each version of the product.

*The sounds of this product may differ from the exact pitches.

The SqueemieWow! series contains sheet music for all the included melodies. By squeezing SqueemieWow!, it will automatically adjust the pitch, allowing you to easily play melodies.

Song 1
(Common Track) **Song 1 “If you're happy and you know it”**
URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_1.pdf

*If you press the S button, the selected song's opening melody will play, so try your best to follow along while looking at the sheet music!

Song 2
(Common Track) **Song 2 “Symphony No.5 c-minor (Fate)”**
URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_2.pdf

*If you press the S button, the selected song's opening melody will play, so try your best to follow along while looking at the sheet music!

Song 3
(Common Track) **Song 3 “Wedding March”**
URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_3.pdf

*If you press the S button, the selected song's opening melody will play, so try your best to follow along while looking at the sheet music!

Song 4
(Common Track) **Song 4 “Twinkle Twinkle Little Star”**
URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_4.pdf

*If you press the S button, the selected song's opening melody will play, so try your best to follow along while looking at the sheet music!

Song 5
(Common Track) **Song 5 “Grandfather's Clock”**
URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_5.pdf

*If you press the S button, the selected song's opening melody will play, so try your best to follow along while looking at the sheet music!

Song 6
(Common Track) **Song 6 “Itsy Bitsy Spider”**
URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_6.pdf

*Go to the next page.

How to play Melody Mode

↓
*If you press the S button, the selected song's opening melody will play, so try your best to follow along while looking at the sheet music!

Song 7 (Common Track)	Song 7 "Jingle Bells" URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_7.pdf
---------------------------------	---

↓
*If you press the S button, the selected song's opening melody will play, so try your best to follow along while looking at the sheet music!

Song 8 (Common Track)	Song 8 "Ode to Joy" URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_8.pdf
---------------------------------	---

↓
*If you press the S button, the selected song's opening melody will play, so try your best to follow along while looking at the sheet music!

Song 9 (SqueemieWow! Bruno-exclusive Track)	Song 9 "She'll Be Coming 'Round the Mountain" URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_9.pdf
--	---

Song 9 (SqueemieWow! Pinky-exclusive Track)	Song 9 "The Flea Waltz" URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_10.pdf
--	---

↓
*If you press the S button, the selected song's opening melody will play, so try your best to follow along while looking at the sheet music!

Song 10 (SqueemieWow! Bruno-exclusive Track)	Song 10 "A week" URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_11.pdf
---	--

Song 10 (SqueemieWow! Pinky-exclusive Track)	Song 10 "The Toy Cha Cha" URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_12.pdf
---	---

↓
*If you press the S button, the selected song's opening melody will play, so try your best to follow along while looking at the sheet music!

Song 11 (SqueemieWow! Bruno-exclusive Track)	Song 11 "Silent Night" URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_13.pdf
---	--

Song 11 (SqueemieWow! Pinky-exclusive Track)	Song 11 "Auld Lang Syne" URL : https://toy.bandai.co.jp/assets/products/pukumi/4570118210364000/musical_score_14.pdf
---	--

→ If you press the S button while Song 11 is playing during Melody Mode, you will switch back to Song 1.

How to play Game Mode

If you press the M button during Melody Mode, the phrase "Game One" will play, and you will switch to Game Mode.



Game Mode:

A game mode where you can have fun squeezing SqueemieWow! with others! Play with others in 2 different game modes where you have fun by taking turns squeezing SqueemieWow!. The first is Game 1 (Stairs Game).

How to play Game 1 (Stairs Game)

Take turns squeezing SqueemieWow! to its limit! The last person to squeeze and make it yell "Dame~!" loses! Play together by following the steps below!

- 1 If you squeeze SqueemieWow!, it will make a "Paa" sound. Squeeze it as much as you like, then hand it over to the next person.
- 2 The more you squeeze SqueemieWow!, the louder the "Paa" sound becomes.
- 3 After SqueemieWow!'s pitch reaches a certain level while shouting "Paa", it will yell "Dame~!".
- 4 If SqueemieWow! yells "Dame~!" after being squeezed by someone, that person loses.
*The timing for when SqueemieWow! yells "Dame~!" changes randomly each time you play.

If you press the S button during Game 1, the phrase "Game Two" will play, and you will switch to playing Game 2 (29th Game).

You can watch this video for further instructions on how to play Game 1 (Stairs Game).



https://youtu.be/ptKh_GX-iMc

How to play Game 2 (29th Game)

After the phrase "Game Two" plays, Game 2 (29th Game) will start. The person who squeezes SqueemieWow! for the 29th time and makes it yell "Dame~!" loses! Play together by following the steps below!

- 1 If you squeeze SqueemieWow! once, it will make a "Again!" sound. You can squeeze SqueemieWow! up to three times per turn before passing it to the next person.
- 2 After the next person squeezes it one to three times, pass it to the next person and repeat.
- 3 On the 29th squeeze, SqueemieWow! will yell "Dame~!".
- 4 The person who squeezed SqueemieWow! the 29th time and made it yell "Dame~!" loses.

Pressing the S button during Game 2 will return you back to Game 1.

You can watch this video for further instructions on how to play Game 2 (29th Game).



<https://youtu.be/JYdPeTtZ8L8>

If you think SqueemieWow! is broken...

SqueemieWow! is not making any sounds

1. It is possible that Sleep Mode has been activated.
➔ Please refer to Sleep Mode on page 3.
2. Even after pressing the M or S button or switching the power OFF and then ON again, there is still no sound.
➔ The batteries may be dead. To replace the batteries, please refer to the battery replacement instructions on page 2.
3. Even after replacing the batteries and trying to squeeze the product, there is still no sound.
➔ Please contact Customer Service Center which is printed on the packaging of this product.

The product seems to be losing or leaking air

1. It is possible that the air pressure adjustment screw (Screw A) has been left unscrewed or loosened.
➔ Please refer to the "Please read the following carefully before playing for the first time." section on page 2, and make sure the air pressure adjustment screw (Screw A) is tightened.
2. The air pressure has been adjusted, but the air is still leaking.
➔ Please contact Customer Service Center which is printed on the packaging of this product.

The product is low on air and cannot be squeezed properly

1. It is possible that the air pressure in the product is low.
➔ Please refer to the air pressure adjustment instructions on page 2.
2. Even after tightening the air pressure adjustment screw (Screw A) and adjusting the air pressure, the air is still leaking.
➔ Please contact Customer Service Center which is printed on the packaging of this product.

The product does not make high sounds unless squeezed very hard, or it makes high sounds even when squeezed very lightly

1. If the product does not make high sounds unless squeezed hard, the sensor sensitivity may be too low.
➔ Please refer to the sensor sensitivity instructions on page 3 and increase the sensitivity level.
2. If the product easily makes high sounds despite being squeezed lightly, the sensor sensitivity may be too high.
➔ Please refer to the sensor sensitivity instructions on page 3 to decrease the sensitivity level.

After switching the product ON, it makes sounds without being touched

1. It is possible that the air pressure inside the product may have changed due to changes in atmospheric pressure caused by altitude or weather.
➔ Please refer to the air pressure adjustment instructions on page 2 and adjust the air pressure.
2. Even after tightening the air pressure adjustment screw (Screw A) and adjusting the air pressure, the product is still making sounds without being touched.
➔ Please contact Customer Service Center which is printed on the packaging of this product.



〈お問い合わせ先〉バンダイお客様相談センター
<https://www.bandai.co.jp/support/top>
ナビダイヤル 0570-041-101
受付10時～16時(土日祝日、当社指定休業日を除く)
海外からのお問い合わせは受け付けておりません。

〈商品送付先〉バンダイ 栃木配送センター
〒321-0298
栃木県下都賀郡壬生町おもちゃのまち4-2-20
電話番号はお客様相談センター共通

発売元

株式会社バンダイ
東京都台東区駒形1-4-8 〒111-8081

BANDAI CO.,LTD.
1-4-8, Komagata, Taito-ku, Tokyo, 111-8081 Japan

Customer service inquiries are not accepted from outside Japan.