



## セット内容

アクセルオリジン本体... 1

**推奨 トリックレベル** ベーシックレベル～スーパーレベル  
**推奨 トリックタイプ** アクセルトリック & スロートリック

**各部名称**

**ボディ...**  
中央についていて、スリング（ひも）を引くと回転するパーツ

**アクセルディスク...**  
外側についていて、アクセル・スピンの際に手で持つパーツ

**スリット...**  
ヨーヨー中央の溝のこと

**スリング...**  
指につけるひものこと

※画像はアクセルオリジン - ドラゴニックレッド - です。※分解図はイメージです。実際に工具を使用しての取り外しはおやめください。

### 警告 (けいこく)

保護者の方へ 必ずお読みください。

- 小部品があります。誤飲・窒息の危険がありますので、3才未満のお子様には絶対に与えないでください。
- 生後18か月未満のお子様には絶対に与えないでください。スリング（ひも）などで首を絞める危険があります。
- 軸のねじ部分は機能上、縁部（エッジ）が鋭くなっていますので危険です。

### 注意 (ちゅうい)

- WEB取扱説明書（本書）を必ずお読みください。
- 回転部の隙間に指や髪の毛や衣服などをはさまれないように注意してください。
- ヨーヨーが回転しているときには、顔を近づけないでください。思わぬケガの恐れがあります。
- 人やものにぶついたり、ふりまわすなど乱暴な遊びをしないでください。
- ハサミを使用する部分がありますので、お取扱いには注意してください。
- 可動部の隙間には指などを入れないでください。はさまれてケガをする恐れがあります。
- 使用する前は必ず説明内容に従って、スリング（ひも）の傷みやボディのゆるみ・ひび割れなどがなければ点検を行ってください。異常が確認された場合は、使用しないでください。ケガや事故の原因になります。
- 自分のレベルにあったヨーヨーを使用し、無理なプレイやトリックは行わないようにしてください。自分や周囲の人がケガをする恐れがあります。
- スリング（ひも）は消耗品です。固くなったリ傷んだりすると、スリング（ひも）が切れて思わぬ事故につながる場合があります。早めに交換してください。
- 周囲に注意し、安全な場所で遊んでください。
- ヨーヨーの部品交換・メンテナンスの際は、内部の金属部分が露出しますので注意して行ってください。
- 部品を交換する場合は、必ず専用のもを使用してください。
- ヨーヨーの改造は危険な事故につながる恐れがありますので、絶対に行わないでください。

### <使用上の注意>

- 梱包材は開封後すぐに捨ててください。
- 本商品を樹脂製のソファやシート、タイルなどの上に置かないでください。長時間接触していると色移る場合があります。
- 可動部分・取付部分を無理な方向に強く引っ張ったり、曲げたりしないでください。
- 使用する前に必ずスリング（ひも）を自分の身長に合わせて調整してください。
- 暗い所で遊ばないでください。

《おことわり》バンダイでは、より安全で楽しいおもちゃをお届けするために、常に研究・調査・改良を行っております。お買い上げの時期によって、同一商品の中にも多少の違いがある場合がありますのでご了承ください。




### 保護シールについて 購入したらまずはじめに剥がそう

買ったばかりのヨーヨーには、保護シールが付いています。梱包材（パッケージ）から取り出したらすぐに剥がしてください。保護シールが付いたままプレイすると手が滑ってしまう可能性があり、危険です。

## スピナーの約束 スピナー...ヨーヨーをプレイする人のこと

ルールを守ってハイパーヨーヨーアクセルをプレイしよう！

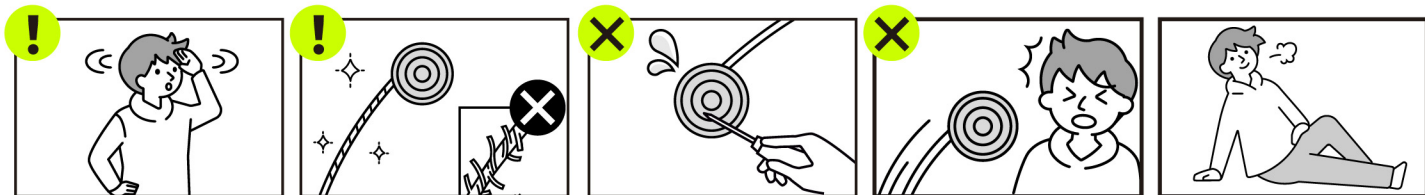

まわりに人や物がいないことを確認する。

自分自身にも当たらないように注意する。

遊ぶ前にストリング(ひも)が傷んでいないか確認する。

※ストリングは消耗品です。傷んだら早めに交換してください。

プレイ前、プレイ後にはしっかりメンテナンスをする。

改造はしない。

人や物にぶつかけたり、危険なプレイをしない。

適度に休憩しよう。

※指や手が痛くなってくる前に適度に休憩をとり楽しくプレイをしてください。

## ストリングのメンテナンス 遊ぶ前にまず確認！

ストリング(ひも)は、消耗品です。遊ぶ前に必ずストリング(ひも)の状態を確認し、傷んでいる場合は交換してください。遊び方によってはストリング(ひも)の傷みが早い場合があります。また、ストリング(ひも)が絡まったり、ベアリングやシャフトに挟まってしまった際は傷んでいる場合がありますので、遊ぶ前に十分確認の上、早めに交換してください。

図1のようにヨーヨー本体を横から見た時、ストリング(ひも)の先端とその付近がどこにも挟まっていないことを確認してください。図2のXの画像のように、ストリング(ひも)がベアリングに挟まって閉まっていると、切れが起こりやすく危険です。Oの画像のようにストリング(ひも)の先端がベアリングにしっかりとかかっている状態を確認してください。交換する際は別売りのハイパーヨーヨーアクセル専用「アクセルストリング」をご使用ください。その他のストリング(ひも)を使用すると切れやすくなる可能性があります。危険です。

図1 【ヨーヨーを横から見た状態】



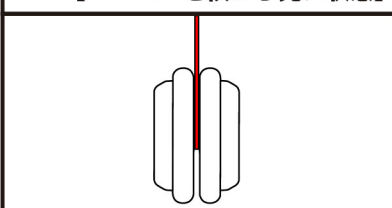


図2 【ヨーヨーを展開した状態】

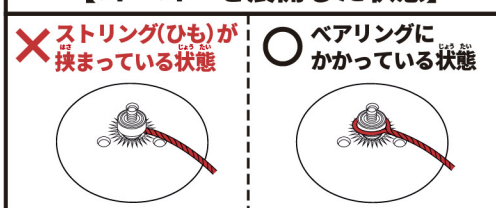

ストリング(ひも)が下記のような状態の場合は、必ず交換してください。

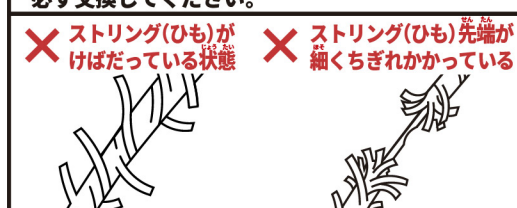

## ストリング(ひも)の交換方法 ストリング(ひも)が傷んでいたら

ストリング(ひも)が消耗した時、別売りのストリング(ひも)を下記の手順で交換してください。

ストリング(ひも)を取り付ける際には、必ず本体の左右が閉じた状態(ヨーヨーが展開されていない状態)で行ってください。

**外し方**

ストリング(ひも)をつまみ、ヨーヨーを回転させてヨリを減らし、輪を大きくしてヨーヨーから外す。

**取り付ける際の注意**

展開されたヨーヨーのベアリングにストリング(ひも)を先にかけないでください。ベアリングにストリングが挟まってしまふ可能性があります。

**取り付け方**

① 先端のヨリを戻して大きな輪を作る。

② 輪にヨーヨーを通す。アクセルオリジンは1重巻きにしてください。

③ ヨーヨーを下に垂らし、自然に回転させてヨリを戻します。



## ストリングの長さ調整方法

ストリング(ひも)を取り付けたら

ストリング(ひも)は自分にあった長さに調節しないとヨーヨーが体や床に当たりやすくうまくプレイすることができません。図1のように本体を床に垂らしておへその約10cm上でストリング(ひも)を切ってください。(長さがこのポイントよりも短い場合はそのまま使用して問題ありません。)

図2のように切ったストリング(ひも)のはし約4cmを2つに折って輪を作ります。

図1


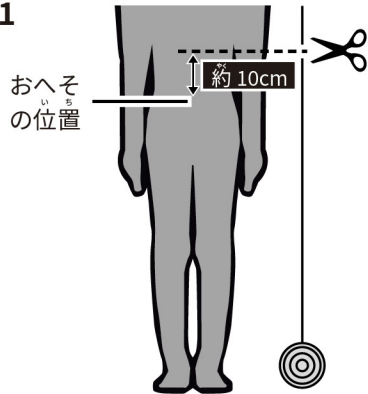


図2



ハサミを使用する際はケガをしないよう注意してください。

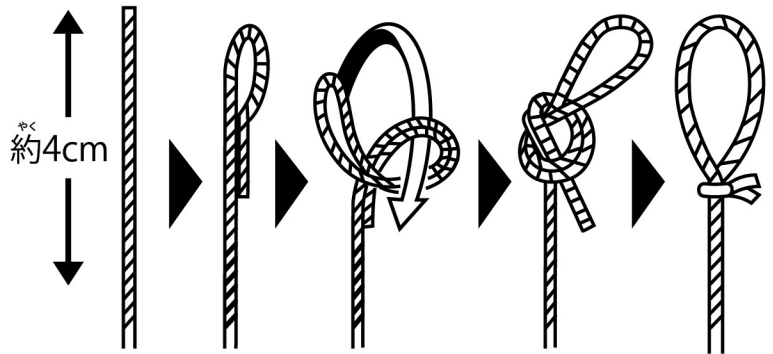



## HYPER YOYO ACCEL のアソビ方

3STEPで基本のアソビをマスターしよう!



### ① ヨーヨーを手につけよう

先端の輪に図1のようにストリング(ひも)を通し、★の部分に利き手中指の第一関節と第二関節の間まで通します。

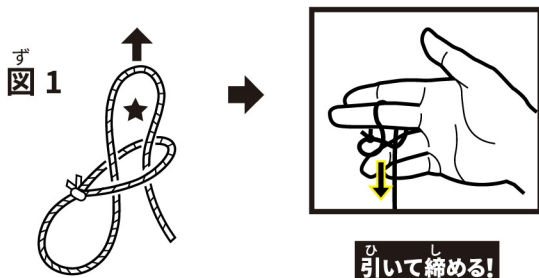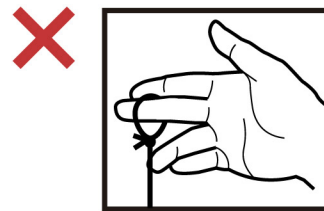

先端の輪にそのまま指を入れしないでください。ストリング(ひも)が指から抜けて、プレイ中にヨーヨーが外れてしまう可能性があります。危険です。



### ② ストリング(ひも)を巻こう

#### 《引っかけ巻き》


図2のように人差し指にストリング(ひも)を引っかけたあとに、2~3周巻きつけ、その後は人差し指を抜いて全てのストリング(ひも)をグルグル巻きつけましょう。

図2

人差し指をかけて2~3周巻く

人差し指を抜く


最後まで巻きつける

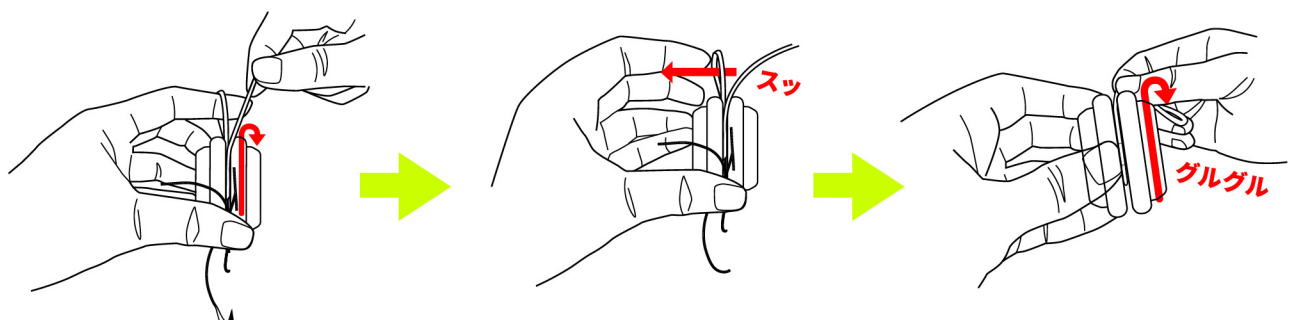

# 《アクセル巻き》

図3

図3のようにSTRING(ひも)を付けていない方の手でアクセルディスクを抑え、人差し指でボディを転がしながら、STRING(ひも)を付けている方の手を近づけて巻き取る。

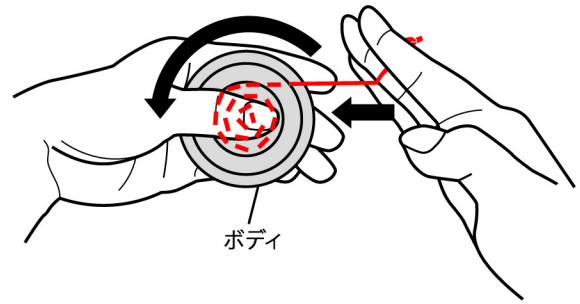


## 3 いよいよアクセル・スピン!

### 持ち方

ヨーヨー本体を横向きにし、両サイドのアクセルディスクを図4のように指で挟みこむように持つ。

コツは強く握りすぎない

図4

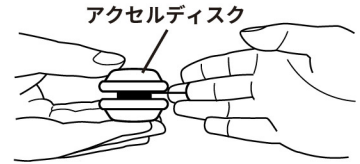


【自分から見た図】

### 回し方

図5のようにカラダの中心♦に横向きにしたヨーヨーを構え、ヨーヨーとSTRING(ひも)を左右に同時に引く。アクセル・スピンの弱まるまえに両手を閉じ、STRING(ひも)を巻き戻す。


図5

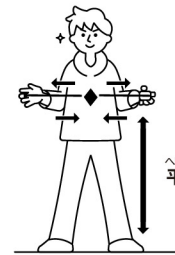

手の中で  
高速スピン!!



STRING(ひも)のコンディションやヨーヨーの状態によっては、アクセル巻きでうまく巻き取れない(うまくアクセル・スピンができない)こともある。次の方法で調整してみよう!

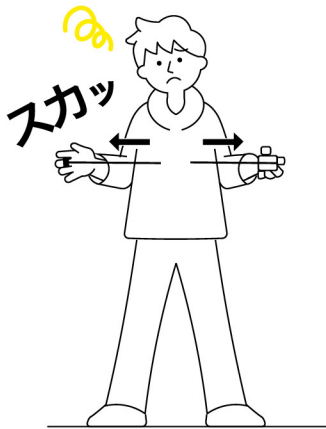

キチンと巻き取ったはずなのに、うまくアクセル・スピンやロング・スリーパーができない...


そんな時は

## ① ヨーヨーを閉めてスリットの幅を調整しよう!

図1の矢印の方向にボディを回して、ヨーヨーを閉めてみましょう。スリットの幅が狭くなって、キチンと巻き取れるようになることがあります。


ヨーヨーを固く閉めすぎると破損のおそれがあります。閉めすぎには注意し、指の力だけでヨーヨーを回すようにしてください。

図1

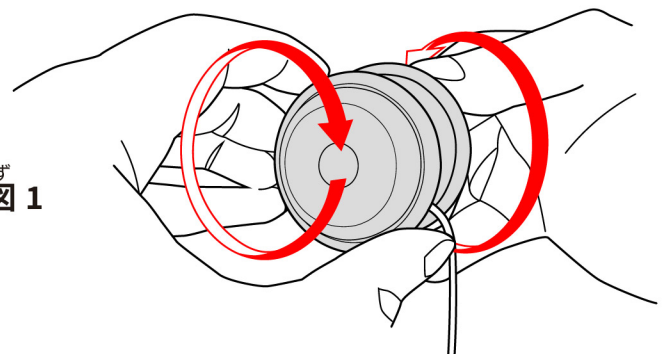


## ② スtring (ひも) のヨリを強くしてみよう!

図2のようにString(ひも)のヨリが弱いとスター(ボディ中央のギザギザ)にString(ひも)が引っかかりづらくなるので、ヨリが強い状態にする必要があります。

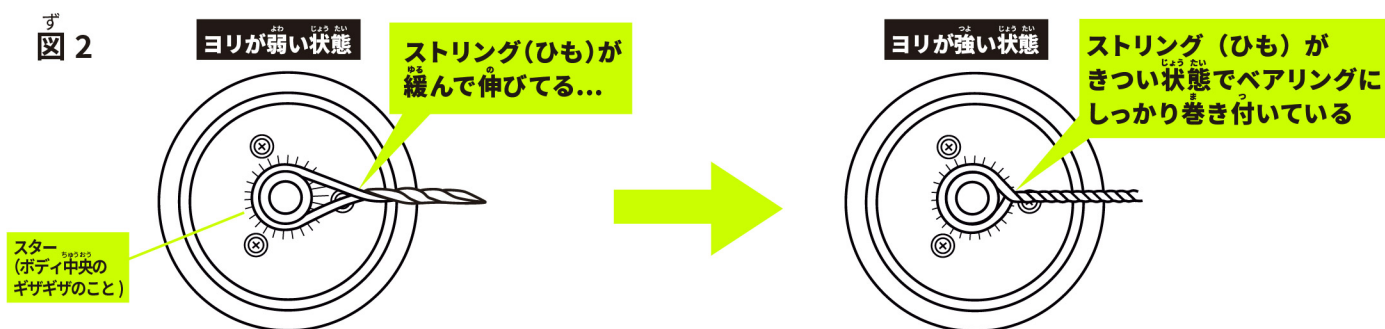

※この図はヨーヨー本体内のString(ひも)の状態を示したイメージ図です。実際のヨリの調整は必ずヨーヨー本体内を組み立てた状態で行ってください。

図3のようにヨーヨーから約10cmあたりのString(ひも)をつまんで、もう一方の手でヨーヨーを時計回りに回転させてヨリを強くしてみましょう!ヨーヨーが巻き取りやすくなります。

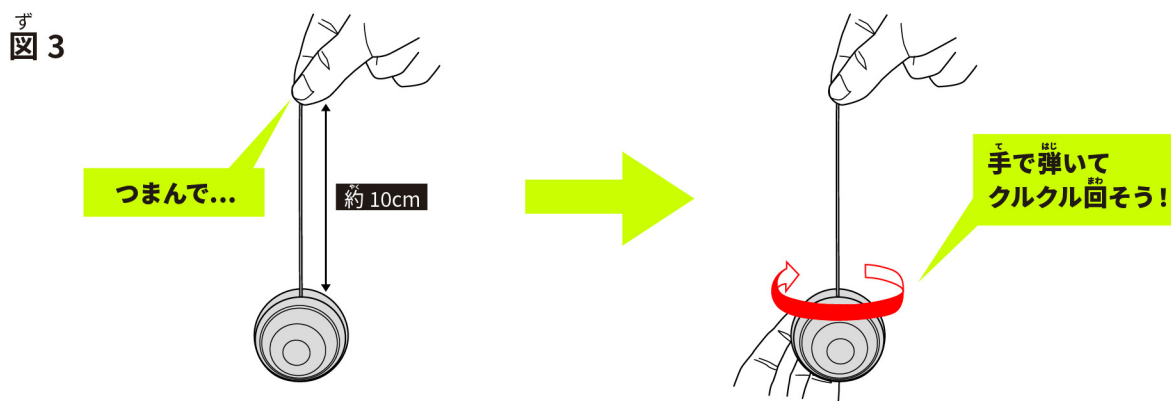


上手く巻き取れない時の調整方法は動画でも紹介しているぞ!

ここをクリック▶ <https://www.youtube.com/watch?v=X8UlriPyd9I>


※通信料などはお客様のご負担となります。

## こんな時は

### String(ひも)が絡まってしまった場合の外し方

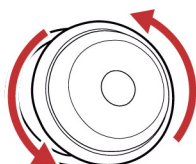


ヨーヨー本体の片側を手でしっかり持ち、反対側を矢印の方向に回し、ヨーヨーを開きます。内部のベアリングを取り外し、String(ひも)の絡まりが取れたら元に戻します。

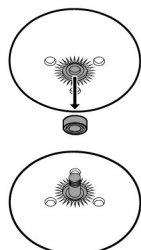


ケガをする危険がありますのでネジ部へは触れないようにしてください。絡まりが解消できたらすぐに本体を閉じてネジ部が露出した状態で床などに放置しないでください。

## アクセルスピンができない

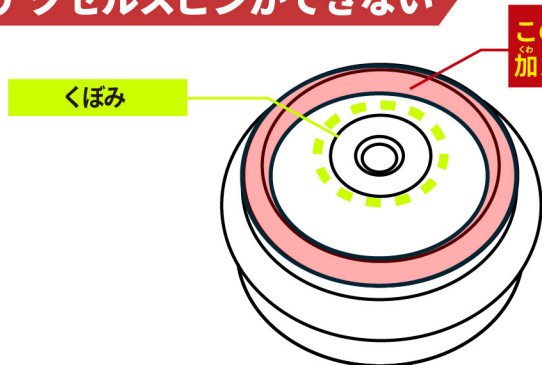

この部分に強い力を加えないでください

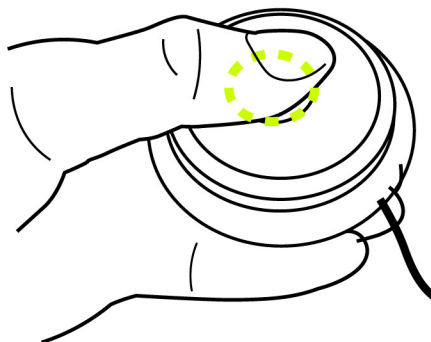

指で挟み込むように持つときに、アクセルディスク中央のくぼみに親指を添えるように持ってください。また、無理に力を入れ過ぎずアクセルディスクだけを優しく挟み込んでください。

アクセルディスクの外側に無理に強い力を加えた状態でアクセル・スピンをし続けると、アクセルディスクが固まって回らなくなってしまう可能性があります。

よりわかりやすい解説動画は公式HPをチェック！  
HYPER YOYO ACCELでできることはまだまだ沢山。  
動画で練習して多種多様なトリックを全てマスターしよう！



ここをクリック▶

<https://toy.bandai.co.jp/series/hyper-yo-yo/>

他にも新着情報や商品ラインナップなどコンテンツが盛り沢山！

※通信料などはお客様のご負担となります。





# Online User Manual for All ACCEL ORIGIN Models

For Ages 8+

©BANDAI



\*The images shown are for illustrative purposes only and may not be an exact representation of the product.

## Set Contents

## ACCEL ORIGIN ... 1

Recommended Trick Levels Basic to Super

Recommended Trick Types Accel Trick & Slow Trick

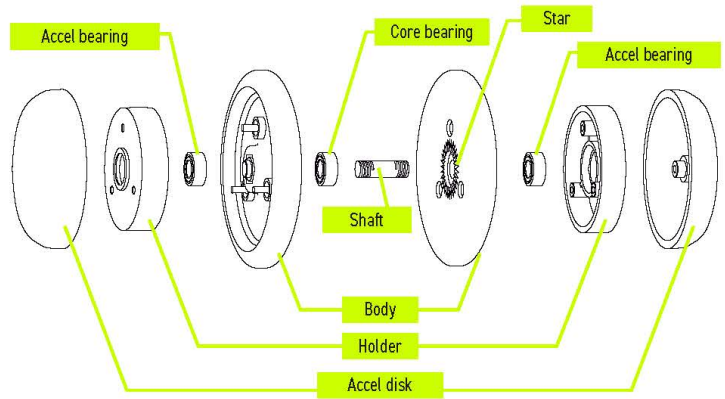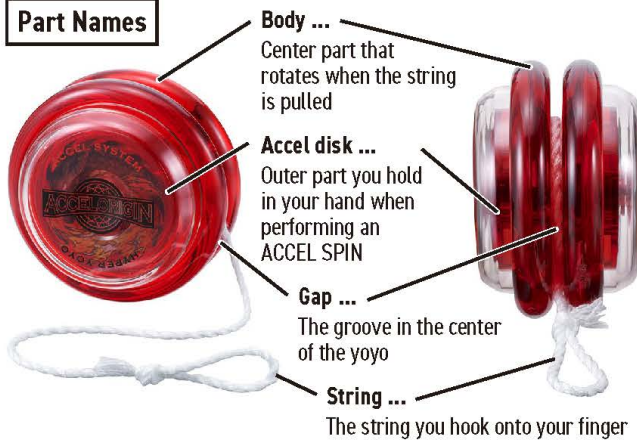

\*Images are of ACCEL ORIGIN-Dragon Red-. \*The parts diagram shown is for illustrative purposes only. Do not disassemble.

### WARNING

Parents or guardians, be sure to read the following:

- Small parts included. May pose risks of choking, suffocation, or unintended ingestion. Do not let children under the age of 3 play with this product.
- Do not let children under the age of 18 months handle this product. Be careful with the string and parts—they can be dangerous if they get wrapped around your neck.
- The threaded part of the shaft has a sharp edge and is dangerous.

### CAUTION

- Be sure to read the Online User Manual (this document).
- Be careful not to get your fingers, hair, or clothes caught in the spinning parts.
- Keep the yoyo away from your face while it's spinning. It could accidentally hit you and cause injury.
- Don't swing the yoyo around wildly or let it hit people or things.
- You might need scissors for some parts—be careful when using them.
- Keep fingers and other body parts away from the moving parts. You might get hurt!
- Check the yoyo and string for damage before using it. If you find any problems, don't use it—it could be dangerous.
- Choose a yoyo that's best suited for your skill level and avoid attempting advanced or dynamic tricks that are above your skill level. May pose risk of injury yourself or others.
- The string is meant to be replaced. It can become stiff, damaged, and potentially break off, leading to risk of unexpected incident or injury. Replace it in a timely fashion.
- Be mindful of your surroundings and play in an open and safe area.
- Be careful when replacing or performing maintenance on yoyo parts, as internal metal parts will be exposed.
- Only use specialized parts for part replacement.
- Do not modify the yoyo under any circumstances, as doing so may result in a serious injury.

### Precautions for Use

- Throw away the plastic packaging right after opening.
- Do not store this product on top of resin sofas and seating, tiles, etc. Prolonged contact may cause discoloration.
- Do not pull or bend the movable or attachable parts forcibly in unintended directions.
- Adjust the string in accordance with your height before use.
- Don't play with the yoyo in dark or poorly lit areas.

**Disclaimer :** We at Bandai are constantly engaged in research, investigation, and efforts towards improvement of our products in order to provide you with a safer and more enjoyable toy. Please note that there may be slight differences in the actual product depending on the time of purchase.




## Protective Sicker

### Peel off sticker after purchase.

Yoyos are sold with protective stickers attached.

Peel off the sticker after removing your yoyo from the packaging.

It is dangerous to use the product with the protective sticker on, as it may cause the yoyo may slip out of your hand.

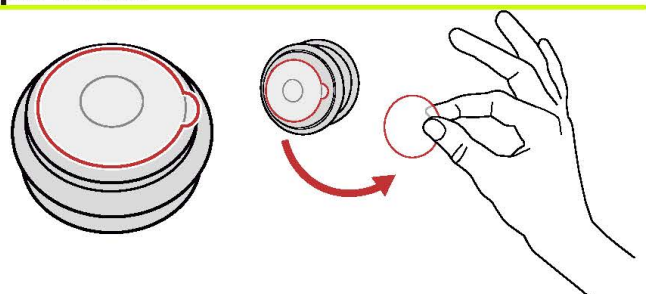


## A Spinner's Promise Spinner: a person who plays with yoyos

Follow the rules when playing with your **HYPER YOYO ACCEL!**



**Look around you and make sure there isn't anyone or anything in your immediate surroundings.**


**Be careful not to hit yourself with the yoyo as well.**

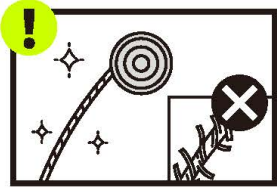

**Before playing, check if there is any damage to the string.**

\*String is an expendable good. Replace the string as soon as possible if it is damaged.

**Be sure to perform maintenance on your yoyo before and after use.**

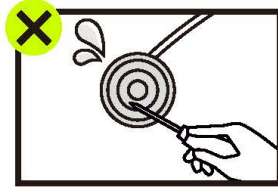

**Do not modify the yoyo.**



**Do not play with the yoyo recklessly. Do not hit others or objects with it.**






**Take breaks every now and then.**

\*For a more enjoyable experience, make sure to take a break before your hands or fingers start hurting.




## String Maintenance Check before playing!

The string is meant to be replaced. Always check the condition of the string before playing. Be sure to replace the string if it is damaged. The string may wear down more quickly depending on how you play with the yoyo. If the string gets tangled or stuck in the bearing or shaft between the gap, it may be damaged, so please check the string thoroughly before playing, and replace it as soon as possible if necessary. When holding the yoyo as shown in fig. 1, confirm that the end of the string and surrounding area are not caught on anything. When the string is caught in the bearing as shown in fig. 2, the string can break easily, leading to a risk of danger. Confirm that the end of the string is secured on the bearing as shown in the ○ figure and not tangled or caught inside. When replacing the string, please use the HYPER YOYO ACCEL-exclusive "ACCEL STRING" (sold separately). Other strings may break easily, leading to risk of danger.

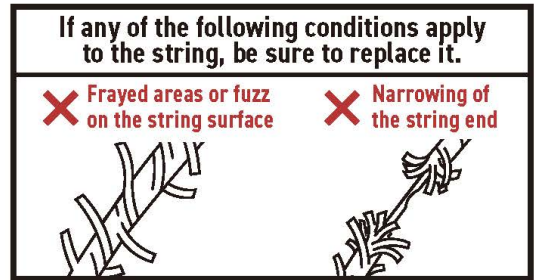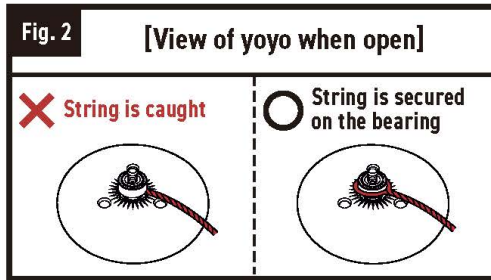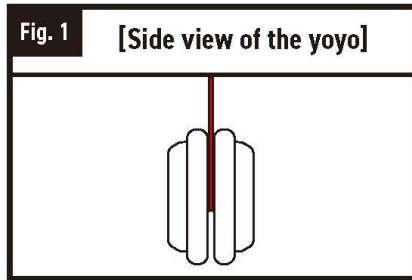

## How to Replace the String If the string is damaged

When the string becomes worn down, replace it (string sold separately) following the steps below. Be sure that the left and right sides of the body of the yoyo are shut (the yoyo is not in an open state) when attaching the string.

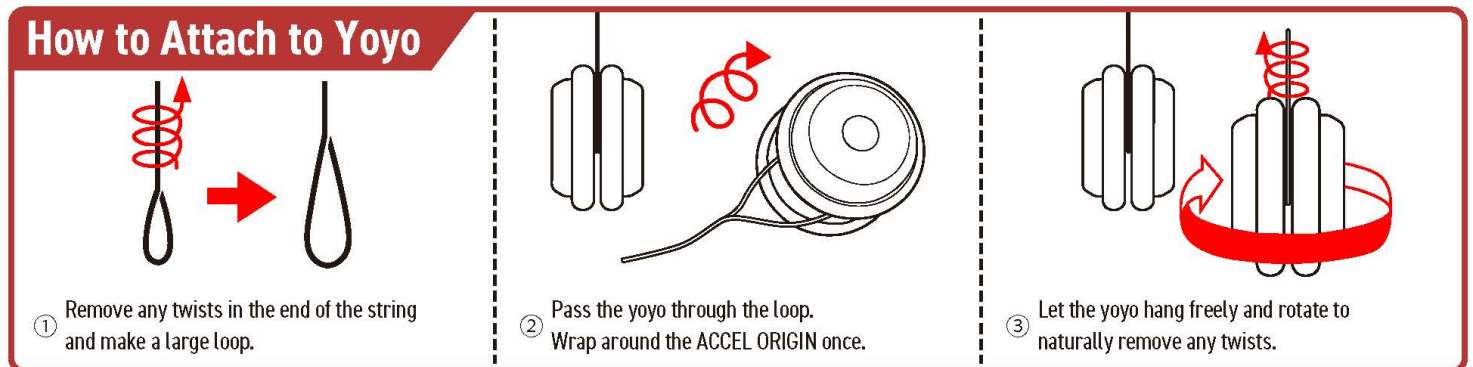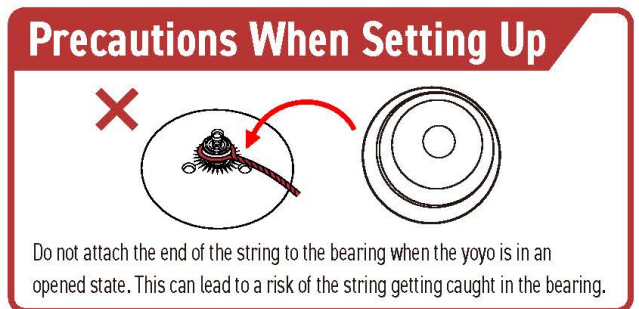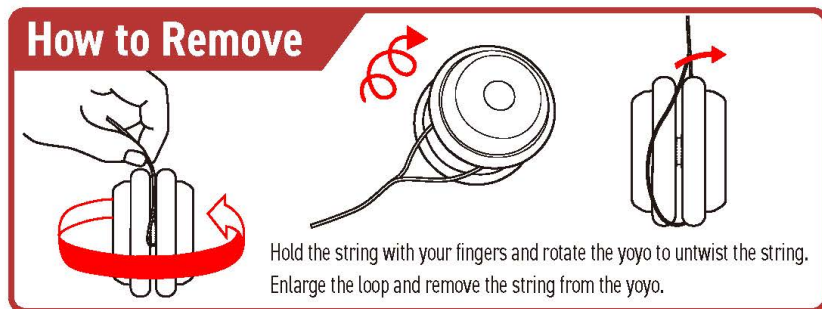





## Adjusting the Length of the String

### When the string is attached

If the string isn't adjusted to the right length for you, the yoyo might keep hitting your body or the floor, making it hard to play. Suspend the yoyo so that the main body rests on the floor and cut the string about 10 cm above your belly button as shown in fig. 1. (It is okay to use the string even if the length is shorter than described above.) Make a loop by folding about 4 cm of the end of the cut string as shown in fig. 2.

Fig. 1


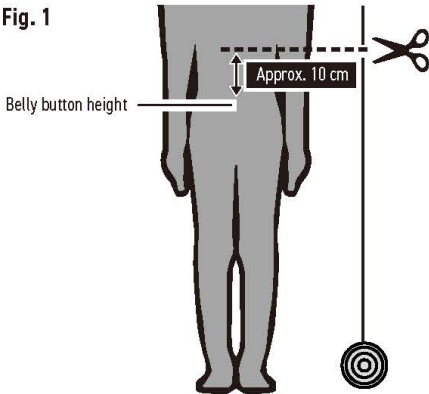


Fig. 2



**Take care to avoid injuries when cutting the string with scissors.**

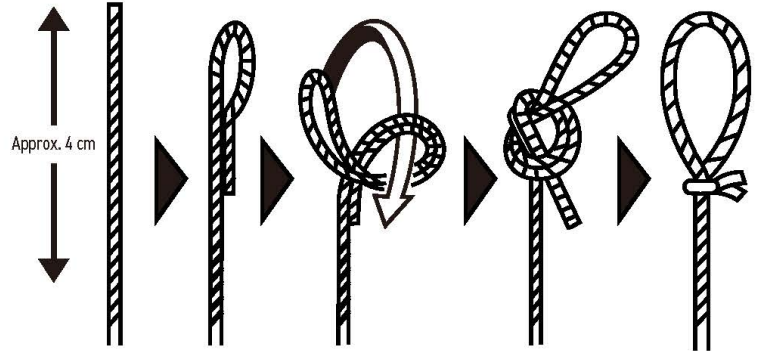

## How to Play with the HYPER YOYO ACCEL


### 3 steps to mastering the basics of play!



### 1 Attach the Yoyo to Your Hand

As shown in fig. 1, pass the string through the loop at the end, then insert the middle finger of your dominant hand, up to the point between your first and second knuckles, through the opening marked with ★.

Fig. 1

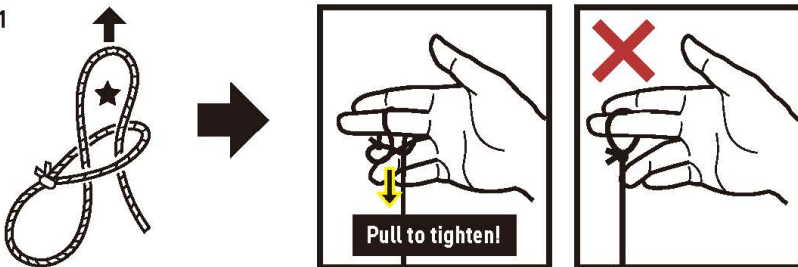

Do not put your finger into a finished pre-made loop at the end. The string may come loose from your finger during play, leading to a risk of danger.




### 2 Wind the String

#### - Hook and Wind -


As shown in fig. 2, after hooking the string over your index finger, wrap it 2-3 times, then remove your index finger and wind the remaining string.

Fig. 2

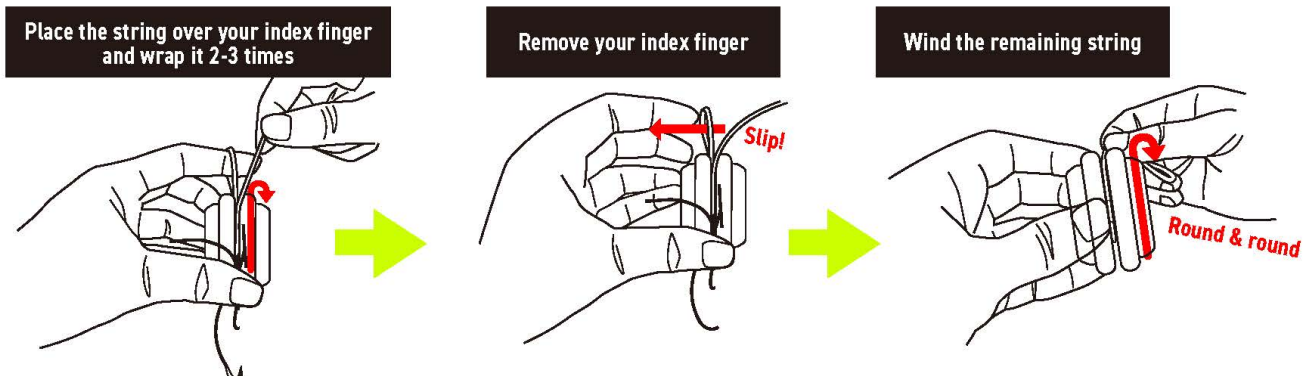

## - Accel Winding -

As shown in fig. 3, while holding the Accel disk in your other hand, roll the yoyo body with your index finger. As you wind up the string, bring the hand with the string attached closer to the yoyo body.

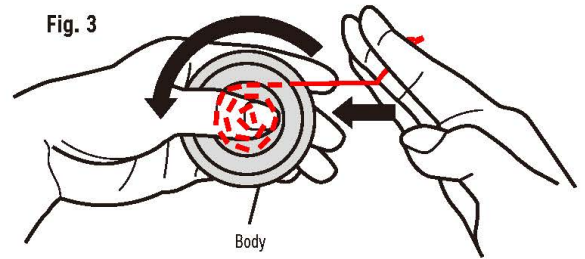


## 3 Finally Ready to ACCEL SPIN!

### How to hold

Hold the yoyo's main body sideways and grip both sides of the Accel disk between your fingers as shown in fig. 4.


Fig. 4 The trick is not gripping too hard!

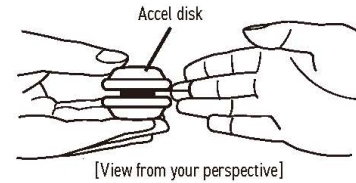

### How to spin


With the yoyo held sideways, bring it up to the center of your body (marked with ♦), then pull the yoyo and string left and right simultaneously as shown in fig. 5. Before the ACCEL SPIN slows, bring your hands together and wind the string.

Fig. 5

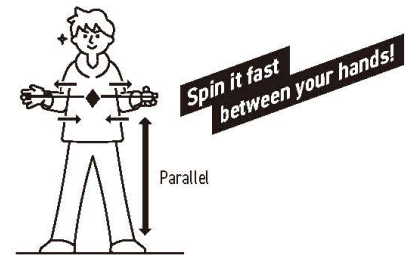

Depending on the condition of the string or the yoyo, it may not be possible to perform the Accel winding properly (or perform the ACCEL SPIN properly).

**Try adjusting it like this!**

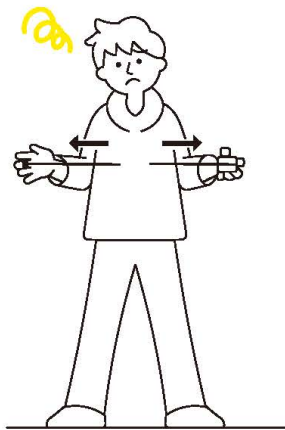


I know I wound it right, but I still couldn't do the ACCEL SPIN or a LONG SLEEPER...

**When this happens...**

## 1 Adjust the width of the gap!

Roll the yoyo body in the direction marked by the arrow in fig. 1 and narrow the gap of the yoyo. It may be possible to properly wind the string by first narrowing the gap.


Fig. 1

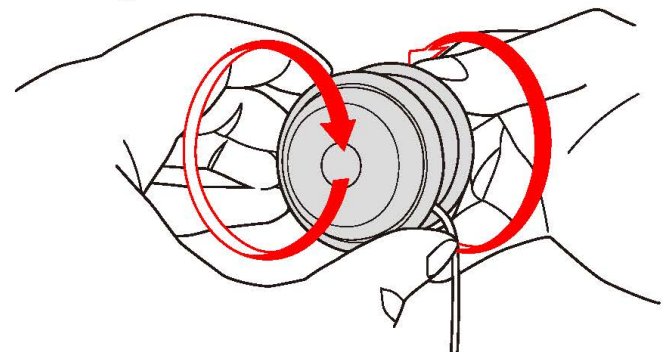

Closing the yoyo too tightly may result in damage. Take care not to overtighten and only use the strength of your fingers to turn the yoyo.


## ② Tighten the twist of the string!

If the twist of the string becomes loose, as shown in fig. 2, it may become difficult for it to catch the star (the notched part in the center of the body) and it may be necessary to tighten the twist.

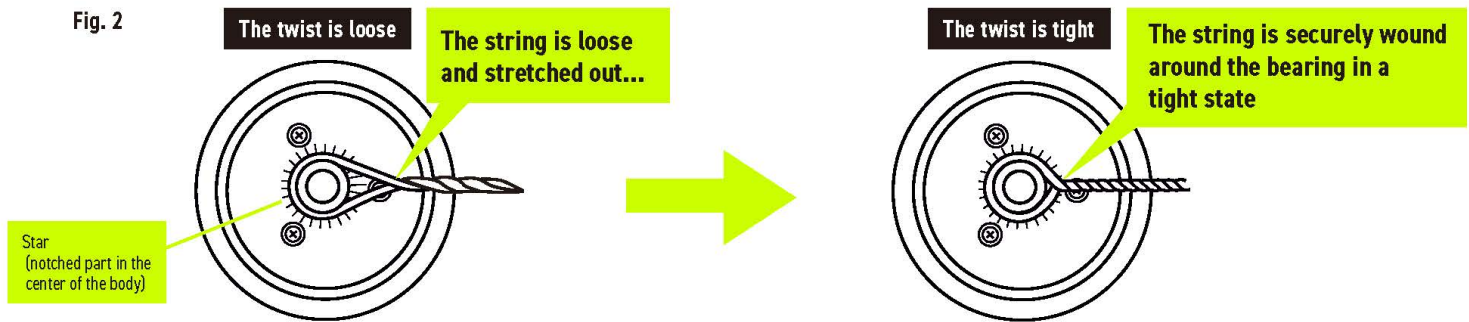

\*These diagrams depict the state of the string inside the yoyo body. Actual yoyo twist adjustments must be done with the yoyo body assembled.

As shown in fig. 3, hold the string with your fingers about 10 cm away from the yoyo, and with your other hand rotate the yoyo clockwise to tighten the twist! The yoyo will become easier to wind.

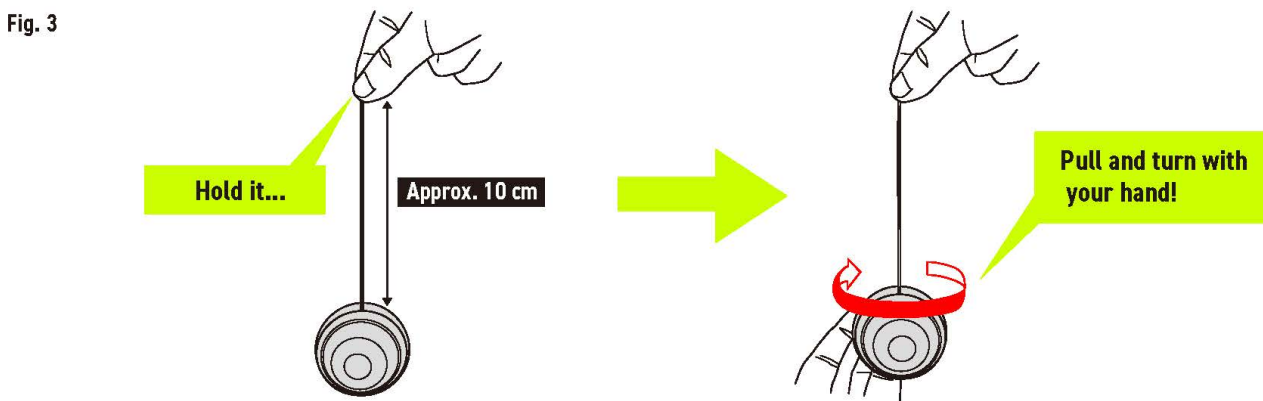


There are also videos explaining how to make adjustments when the yoyo doesn't wind properly!

Click here ▶ <https://www.youtube.com/watch?v=X8UlriPyd9I>


\*The customer is responsible for any data or internet-related fees incurred.

## Addressing Issues

### How to remove the string when it becomes tangled

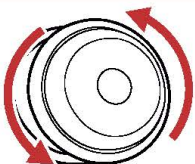


Hold one side of the yoyo body firmly with one hand and turn the other side in the direction of the arrow to open the yoyo. Remove the bearing from inside, and once the tangle comes undone, return the bearing to its initial position.

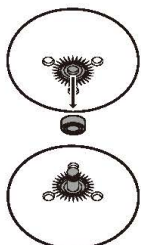


To avoid the risk of injury, do not touch the screw. Once the tangle has been undone, close the yoyo body immediately and do not leave it on the floor or elsewhere with the screw exposed.

## If you can't do the ACCEL SPIN

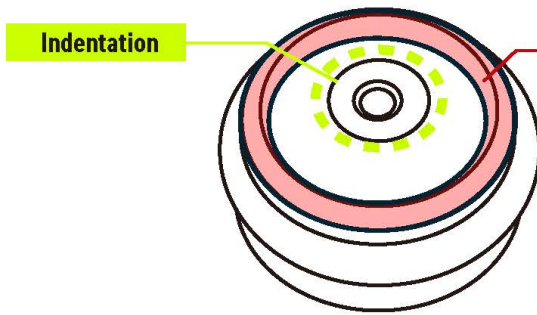

Indentation

Do not apply strong force to this part

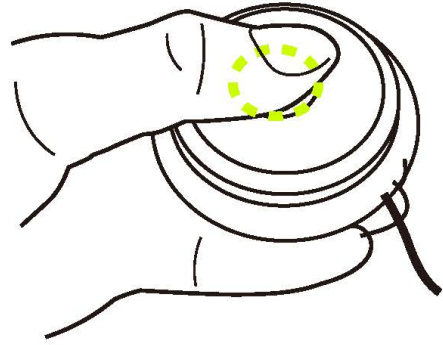

When holding the yoyo between your fingers, hold it such that your thumb rests in the indentation at the center of the Accel disk. Additionally, do not apply too much force and gently pinch only the Accel disk.

If excessive force is applied to the outer portion of the Accel disk while continually performing the ACCEL SPIN, the Accel disk may lock up and become unable to spin.

Check the official website for easy-to-understand explanatory videos!  
There's so much more you can do with the HYPER YOYO ACCEL.  
Practice with the videos and master all the various tricks!



**HYPER  
YOYO  
ACCEL**

Click here ▶

<https://toy.bandai.co.jp/series/hyper-yo-yo/>

You can find tons of news and information about products as well!

\*The customer is responsible for any data or internet-related fees incurred.

