



アクセルストリング全種共通 WEB 取扱説明書

対象年齢8才以上

©BANDAI

※画像はイメージです。実際の商品とは多少異なる場合があります。

セット内容

ストリング(約100cm)...3本(初回限定版のみ4本入り、ホワイトエディション10本入り)

使用する際は台紙から1本ずつ取り外してください。

警告 (けいこく)

保護者の方へ 必ずお読みください。

- 生後18カ月未満のお子様には絶対に与えないでください。ストリング(ひも)などで首を絞める危険があります。

注意 (ちゅうい)

- WEB取扱説明書(本書)を必ずお読みください。
- ストリング(ひも)を首にかけてふざけたり、乱暴に遊んだりしないでください。窒息などの危険があります。
- ストリング(ひも)は、指などに巻きついたりしないでください。血がかよわなくなり危険です。
- ぶつけたり、ふりまわすなど乱暴な遊びをしないでください。

<使用上の注意>

- プラスチック梱包材は開封後すぐに捨ててください。
- 本商品はハイパーヨーヨー専用のストリング(ひも)です。それ以外の目的には使用しないでください。



ストリング(ひも)交換の目安

定期的にチェックしよう！

ストリング(ひも)は消耗品です。遊ぶ前に必ずストリング(ひも)の状態を確認し、傷んでいる場合は本品などハイパーヨーヨーアクセル専用「アクセルストリング」を使用し交換してください。その他のストリング(ひも)を使用すると切れやすくなる可能性があります危険です。

ストリング(ひも)が下記のような状態の場合は、必ず交換してください。

✕ ストリング(ひも)が
けばだっている状態

✕ ストリング(ひも)先端が
細くちぎれかかっている



また、遊ぶ前にストリング(ひも)がきちんと取り付けられているかを確認してください。

図1のようにヨーヨー本体を横から見た時、ストリング(ひも)の先端とその付近がどこにも挟まっていないことを確認してください。

図2の✕のようにストリング(ひも)がベアリングに挟まって閉まっていると、切れが起こりやすく危険です。

○の画像のようにストリング(ひも)の先端がベアリングにしっかりとかかっており、絡まっていないことを確認してください。

図1 【ヨーヨーを横から見た状態】

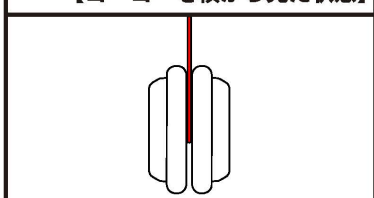


図2 【ヨーヨーを展開した状態】







ストリング(ひも)の交換方法

ストリング(ひも)が傷んでいたら

ストリング(ひも)が消耗した時、ストリング(ひも)を下記の手順で交換してください。



ストリング(ひも)を取り付ける際には、必ず本体の左右が閉じた状態(ヨーヨーが展開されていない状態)で行ってください。

外し方

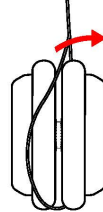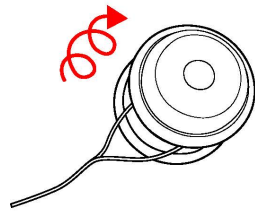


ストリング(ひも)をつまみ、ヨーヨーを回転させてヨリを減らし、輪を大きくしてヨーヨーから外す。

取り付ける際の注意

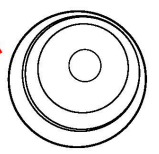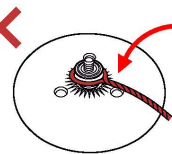


展開されたヨーヨーのベアリングにストリング(ひも)を先にかけないでください。ベアリングにストリングが挟まってしまう可能性があります。


取り付け方

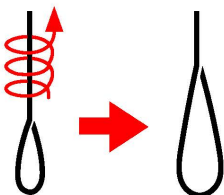

① 先端のヨリを戻して大きな輪を作る。

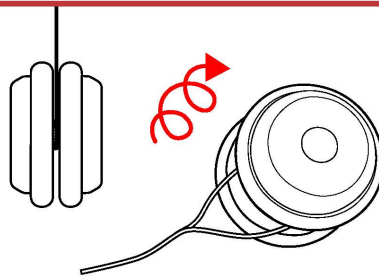

② 輪にヨーヨーを通す。
アクセルオリジンは1重巻きにしてください。

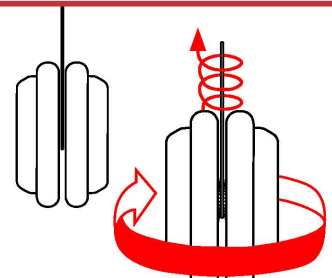

③ ヨーヨーを下に垂らし、自然に回転させてヨリを戻します。



ストリング(ひも)の長さ調整方法

ストリング(ひも)を取り付けたら

ストリング(ひも)は自分にあった長さに調節しないとヨーヨーが体や床に当たりやすくうまくプレイすることができません。図1のように本体を床に垂らしておへその約10cm上でストリング(ひも)を切ってください。(長さがこのポイントよりも短い場合はそのまま使用して問題ありません。)

図2のように切ったストリング(ひも)のはし約4cmを2つに折って輪を作ります。

図1


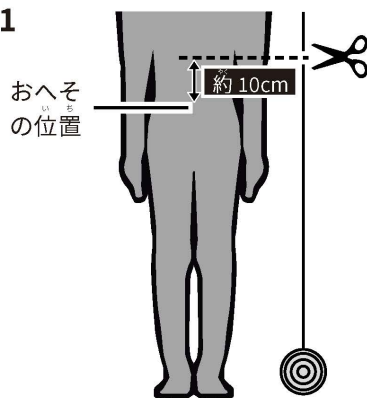


図2




ハサミを使用する際はケガをしないよう注意してください。

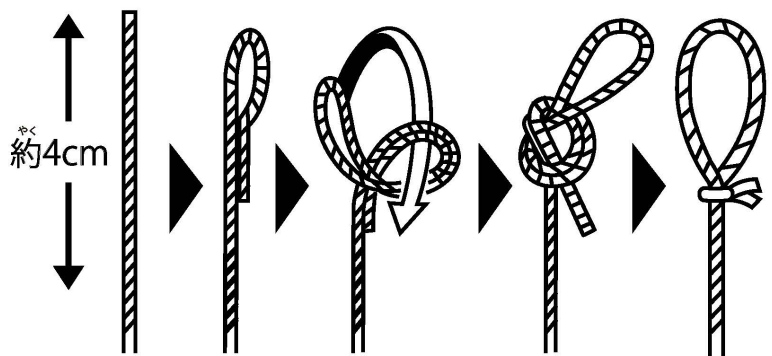


こんな時は

ストリングが絡まってしまった場合の外し方

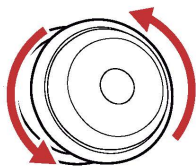

ヨーヨー本体の片側を手でしっかり持ち、反対側を矢印の方向に回し、ヨーヨーを開きます。内部のベアリングを取り外し、ストリング（ひも）の絡まりが取れたら元に戻します。

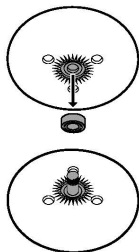

ケガをする危険がありますのでネジ部へは触れないようにしてください。絡まりが解消できたらすぐに本体を閉じてネジ部が露出した状態で床などに放置しないでください。

公式サイトでは、メンテナンスの方法やトリックのやり方をわかりやすい動画で公開中！
全てマスターして一人前のスピナーを目指そう！



ここをクリック▶

<https://toy.bandai.co.jp/series/hyper-yo-yo/>

他にも新着情報や商品ラインナップなどコンテンツが盛り沢山！

※通信料などはお客様のご負担となります。





Online User Manual for All ACCEL HOLDER Models

For Ages 8+

©BANDAI

*The images shown are for illustrative purposes only and may not be an exact representation of the product.

Set Contents String (approx. 100 cm) ... 3 (Initial limited edition contains 4)

Remove one string from the backing paper at a time.

WARNING

Parents or guardians, be sure to read the following:

- Do not let children under the age of 18 months handle this product. Be careful with the string and parts—they can be dangerous if they get wrapped around your neck.

CAUTION

- Be sure to read the Online User Manual (this document).
- Don't wrap the string around your neck or play roughly with it. It can be dangerous and cause choking.
- Don't wrap the string around your fingers or other body parts—it can stop blood flow and hurt you.
- Don't swing the yoyo around wildly or hit people or things with it.

Precautions for Use

- Throw away the plastic packaging right after opening.
- This string is only for the HYPER YOYO. Do not use it for anything else.



When to Replace the String Check frequently!

This string is meant to be replaced and may become worn after prolonged use. Always check the condition of the string before playing. If it is damaged or frayed, use a product such as "ACCEL STRING" exclusively for the HYPER YOYO ACCEL to replace it. Other strings may break easily, leading to risk of danger.

If any of the following conditions apply to the string, be sure to replace it.

✗ Frayed areas or fuzz on the string surface

✗ Narrowing of the string end



Additionally, be sure to confirm that the string is properly attached before playing.

When holding the yoyo as shown in fig. 1, confirm that the end of the string and surrounding area are not caught on anything.

If the string gets caught in the bearing like in fig. 2, it can break easily and cause problems.

Confirm that the end of the string is secured on the bearing as shown in the ○ figure and not tangled or caught inside.

Fig. 1 [Side view of the yoyo]


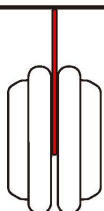


Fig. 2 [View of yoyo when open]

✗ String is caught



○ String is secured on the bearing

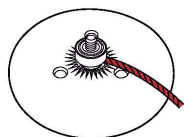




How to Replace the String

If the string is damaged

When the string becomes worn down, replace it (string sold separately) following the steps below.

Be sure that the left and right sides of the body of the yoyo are shut (the yoyo is not in an open state) when attaching the string.



How to Remove

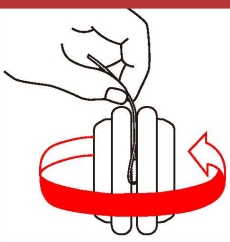

Hold the string with your fingers and rotate the yoyo to untwist the string. Enlarge the loop and remove the string from the yoyo.




Precautions When Setting Up

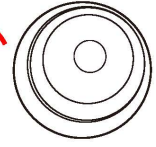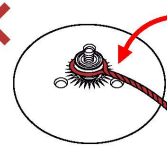


Do not attach the end of the string to the bearing when the yoyo is in an opened state. This can lead to a risk of the string getting caught in the bearing.


How to Attach to Yoyo

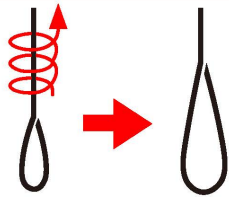

- ① Remove any twists in the end of the string and make a large loop.

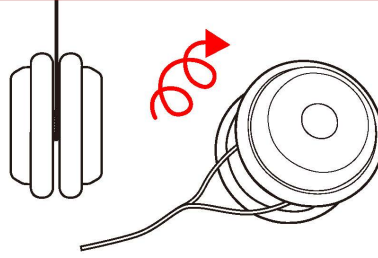

- ② Pass the yoyo through the loop. Wrap around the ACCEL ORIGIN once.

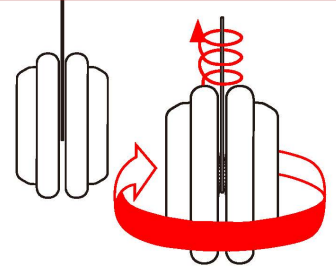

- ③ Let the yoyo hang freely and rotate to naturally remove any twists.



How to Adjust the Length

When the string is attached

If the string isn't adjusted to the right length for you, the yoyo might keep hitting your body or the floor, making it hard to play.

Suspend the yoyo so that the main body rests on the floor and cut the string about 10 cm above your belly button as shown in fig. 1. (It is okay to use the string even if the length is shorter than described above.)

Make a loop by folding about 4 cm of the end of the cut string as shown in fig. 2.

Fig. 1


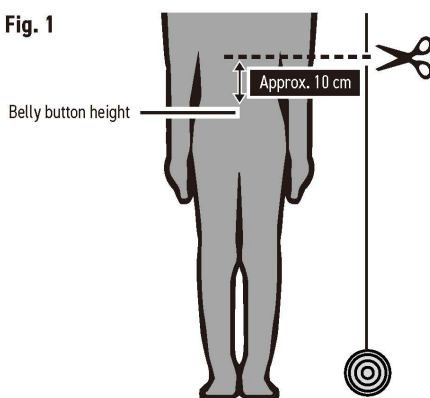


Fig. 2




Take care to avoid injuries when cutting the string with scissors.

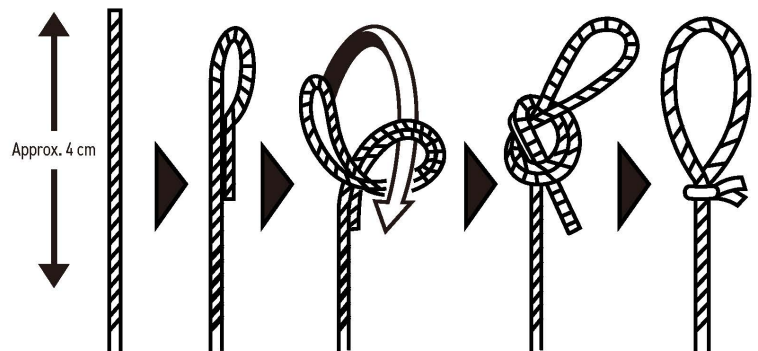


Addressing Issues

How to Remove the String if Tangled

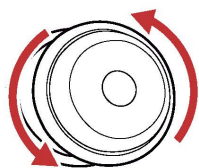

Hold one side of the yoyo body firmly with one hand and turn the other side in the direction of the arrow to open the yoyo. Remove the bearing from inside, and once the tangle comes undone, return the bearing to its initial position.

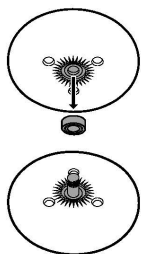

To avoid the risk of injury, do not touch the screw. Once the tangle has been undone, close the yoyo body immediately and do not leave it on the floor or elsewhere with the screw exposed.



You can find easy-to-understand videos about maintenance and tricks on the official website!
Master all of them and become a full-fledged spinner!

**HYPER
YOYO
ACCEL**

Click here ►

<https://toy.bandai.co.jp/series/hyper-yo-yo/>

You can find tons of news and information about products as well!

*The customer is responsible for any data or internet-related fees incurred.

