



ないよう  
**セット内容**

かくぶ めいしょう  
**各部名称**

アクセルホルダー…1

▼アクセルオリジン装着イメージ図

※ハイパーヨーヨー  
 アクセル本体は  
 別売りです。

**警告 (けいこく)**

保護者の方へ 必ずお読みください。

- 小部品や小球があります。誤飲・窒息の危険がありますので、3才未満のお子様には絶対に与えないでください。
- 生後18ヵ月未満のお子様には絶対に与えないでください。ストリング (ひも) などで首を絞める危険があります。

**注意 (ちゅうい)**

- WEB 取扱説明書 (本書) を必ずお読みください。
- バンドを首にかけてふざげたり、乱暴に遊んだりしないでください。窒息などの危険があります。
- バンドは、指などに巻きつけたりしないでください。血がかよわなくなり危険です。
- ぶつかけたり、ふりまわすなど乱暴な遊びをしないでください。
- 可動部の隙間には指などを入れないでください。はさまれてケガをする恐れがあります。

<使用上の注意>

- プラスチック梱包材は開封後すぐに捨ててください。
- 本商品を樹脂製のソファやシート、タイルなどの上に置かないでください。長時間接触していると色移る場合があります。
- 可動部分・取付部分を無理な方向に強く引っ張ったり、曲げたりしないでください。
- 本商品はハイパーヨーヨー専用のホルダーです。それ以外の目的には使用しないでください。

**本体への取り付け方** まずは、しっかりと固定しよう！

**① バンド部分を広げよう**

ストッパーの突起部分を押し込みながら矢印の方向にスライドし、バンドとベルト部のスキマを広げます。

①突起部分を押し込む


Before

After

② 矢印の方向にスライドする

## 2 本体に装着しよう

ヨーヨー本体のスリット(中央の溝)にバンドを挟み込むように入れる。  
その際にバンドがねじれないように注意する。

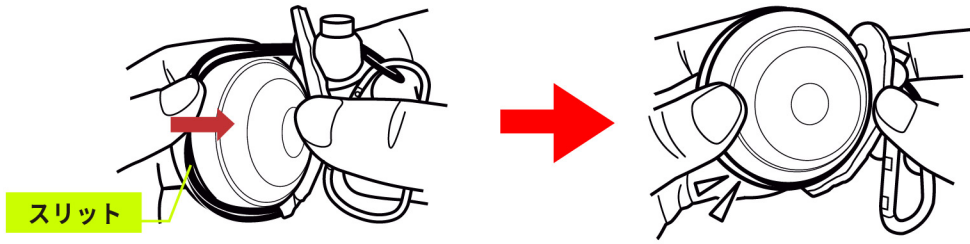

スリットの中にバンドが  
しっかりと収まっていたら  
OK!

## 3 ストッパーで固定しよう


ストッパーの突起部分を押し込みながら矢印の方向にスライドし、落ちないようにしっかりと固定する。




## 持ち運び方 お気に入りのヨーヨーをクールに持ち運ぼう!

カラビナの開閉部分を矢印の方向に押し込み、開いた★のスキマを好きな場所にひっかけて持ち運んでください。

可動部に指が挟まれないように注意してください

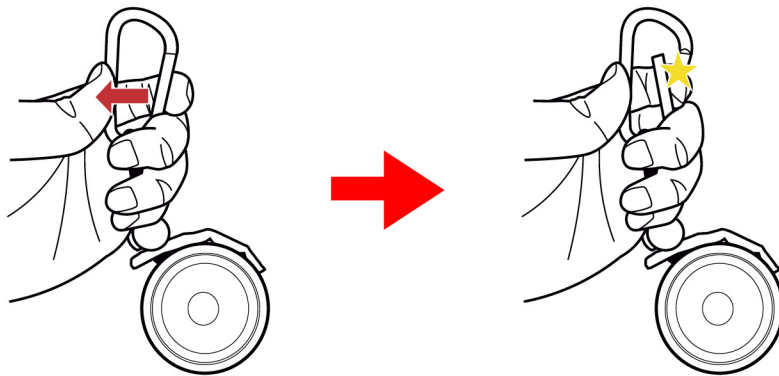

例えばこんなところに! ※本商品のセット内容以外は全て別売りです。

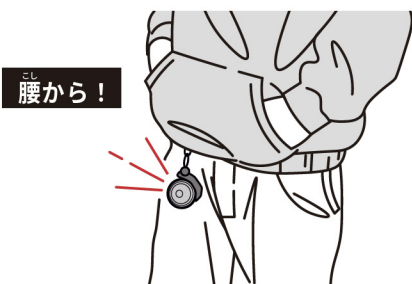

周囲のものに引っ掛けたりすると破損・紛失の恐れがありますので注意してください



# Online User Manual for All ACCEL HOLDER Models

For Ages 8+

©BANDAI

\*The images shown are for illustrative purposes only and may not be an exact representation of the product.

## Set Contents ACCEL HOLDER ... 1



◀ Visual of ACCEL ORIGIN Setup



\*The HYPER YOYO ACCEL is sold separately.

### ⚠ WARNING

Parents or guardians, be sure to read the following:

- Small parts included. May pose risks of choking, suffocation, or unintended ingestion. Do not let children under the age of 3 play with this product.
- Do not let children under the age of 18 months handle this product. Be careful with the string and parts—they can be dangerous if they get wrapped around your neck.

### ⚠ CAUTION

- Read this online product manual carefully.
- Don't wrap the band around your neck or play roughly with it. This can be dangerous and cause choking.
- Do not wrap the band around fingers or other body parts—it can stop blood flow and hurt you.
- Do not bang the product against other objects, swing it around, or engage in other aggressive forms of play.
- Keep fingers and other body parts away from the moving parts. You might get hurt!

### Precautions for Use

- Throw away the plastic packaging right after opening.
- Do not store this product on top of resin sofas and seating, tiles, etc. Prolonged contact may cause discoloration.
- Do not pull or bend the movable or attachable parts forcibly in unintended directions.
- This holder is only for the HYPER YOYO. Don't use it for anything else.



Do not put in mouth



Do not wrap around

## How to Attach to Yoyo First, secure the product!

### 1 Loosening the Band


Squeeze the toggle on the cord stopper and pull the band in the direction of the arrow to loosen the band and belt.

① Squeeze the toggle




② Pull in the direction of the arrow

Before

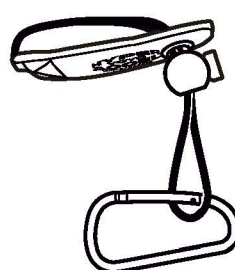


After

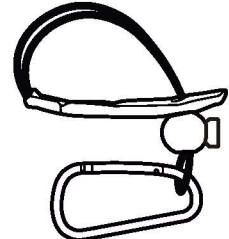



## 2 Attaching to Yoyo

Place the band between the gap of the yoyo (groove down the center).  
Make sure the band is not twisted.

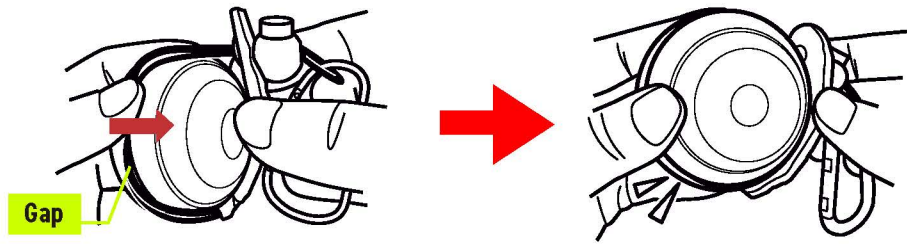


If the band is securely inside the gap, you're good to go!

## 3 Securing with Cord Stopper

Squeeze the toggle on the cord stopper and pull the band in the direction of the arrow to secure the yoyo so that it doesn't fall out.

1 Squeeze the toggle on the cord stopper

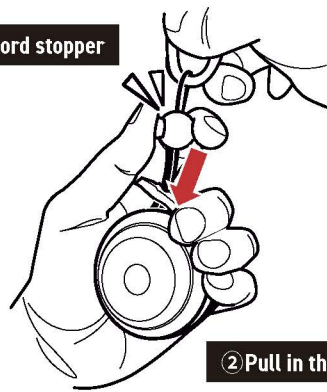


2 Pull in the direction of the arrow



## Taking Your Yoyo with You Carry your favorite yoyo around with you in style!


Open the carabiner in the direction of the arrow and clip it securely through the ★ gap.

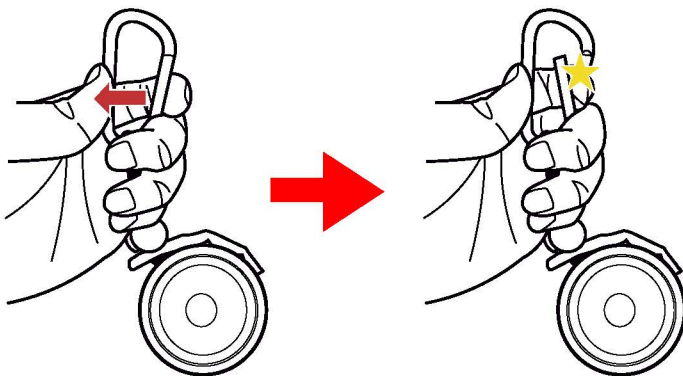

Be careful not to get fingers caught between the movable parts.

Try carrying it around like this!

\*All other items not included in the set are sold separately.

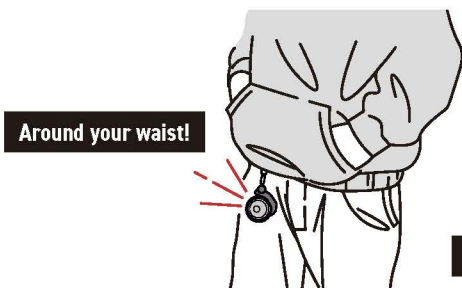

On your backpack!



On a tote bag!



Avoid attaching it to surrounding objects as it may end up getting lost or damaged.