



©円谷プロ
©ウルトラマンオメガ製作委員会・テレビ東京

メテオカイジュウシリーズ1 DXレキネス

あそ かの
の遊び方


セット内容と各部名称

レキネス本体…1

【スリープモード】



【メテオカイジュウモード】

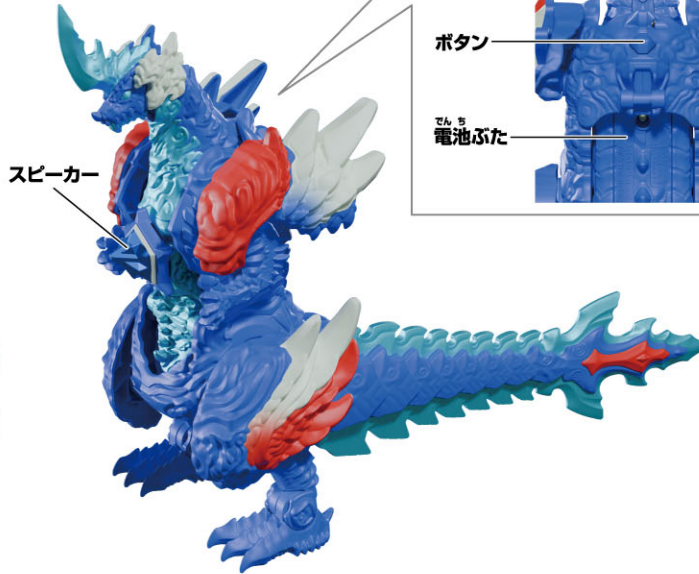

【背面】




リセットボタン

ボタン

電池ふた

【カリバーモード】 (レキネスカリバー)

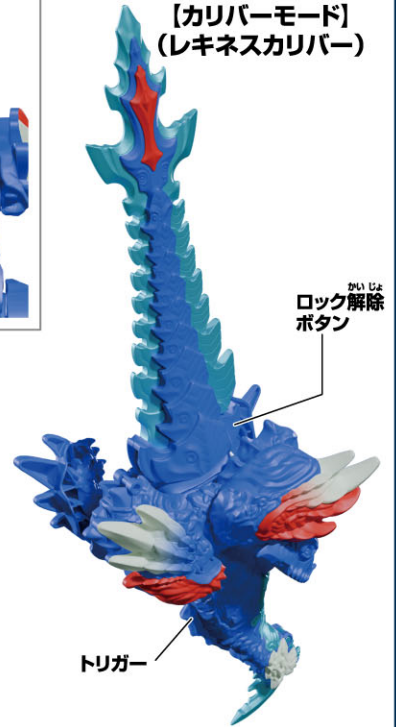

ロック解除
ボタン

トリガー

警告 (けいこく)

保護者の方へ 必ずお読みください。

●小部品があります。誤飲・窒息の危険がありますので、3才未満のお子様には絶対に与えないでください。

注意 (ちゅうい)

●ぶついたり、ふりまわすなど乱暴な遊びをしないでください。●本商品には電子部品を使用しております。ペースメーカーをご使用の方は、本商品を身体に近づけないようご注意ください。●可動部には指などを入れないでください。はさまれてケガをする恐れがあります。《電池を誤使用すると発熱・破裂・液漏れの恐れがあります。下記に注意してください》●万一、ボタン電池を飲み込んだとき、ボタン電池から漏れた液が目に入ったときは、すぐに医師に相談してください。漏れた液が皮膚や服に付いたときは水で洗ってください。●ボタン電池は飲み込むと危険です。お子様の手の届かない所に保管してください。万一、飲み込んだ場合は、すぐに医師に相談してください。●ボタン電池の交換は保護者の方が行ってください。●古い電池と新しい電池、いろいろな種類の電池をまぜて使わないでください。●十一(プラスマイナス)を正しくセットしてください。●ショートさせたり充電、分解、加熱、火の中に入れたりしないでください。●廃棄するときは、自治体の廃棄物処理の指示に従ってください。



くちにいけない

〈使用上の注意〉●梱包材は開封後はすぐに捨ててください。●本商品には塗装部分がありますので、保管の際には他のもの(樹脂製品や家具、ソファ等)と接触しないようにしてください。色が移る場合があります。●可動部分・取付部分を無理な方向に強く引っ張ったり、曲げたりしないでください。●発音の一部にイントネーションが違っていたり、商品の特性上聞き取りにくいものがありますが、ご了承ください。●変形の難しいところは保護者の方が手伝ってあげてください。●本商品は精密な電子部品で構成されています。落としたり、水にぬらしたり、汚したり、分解したりしないでください。また、高温・低温になる所での使用、保管はさけてください。●セットされている電池はテスト用です。音声小さくなったら電池を交換してください。●可動部分がロックされていることを確認して遊んでください。

保護者の方へ

この枠内では、本商品をご使用になるときに、注意していただきたいことを記載しております。よくお読みいただき、お子様へご説明ください。

振り回さない!!



指挟み注意!!

※可動部の隙間に指を入れないでください。



【正面】

【背面】



遊ぶ前に…絶縁シートの外し方

※梱包状態から始めます。

①尻尾を矢印の向きに倒し、尻尾の根本に胴体の嵌合部分をしっかりと差し込みます。




②レキネス本体背面から出ている絶縁シートを矢印の方向に引き抜きます。



③リセットボタンを先の細い棒などで軽く押します。
→スリープ状態になります。



④尻尾を元に戻す場合、ロック解除ボタンを押しながら尻尾を動かしてください。
→「レキネスアーマー解除音」が鳴ります。

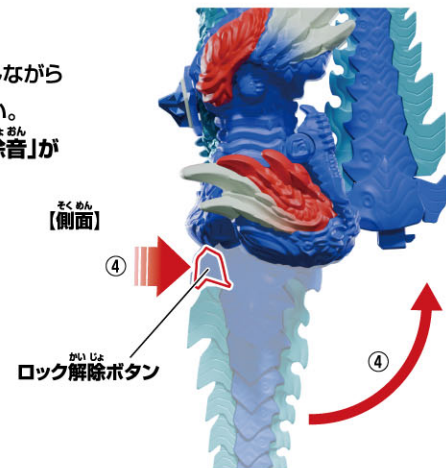

電池の入れ方

※必ず保護者の方が行ってください。

※ボタンを押した際に同じ音が繰り返し鳴るなどの誤動作をする場合は、すべて新しい電池に交換してください。

①尻尾を矢印の向きに倒し、尻尾の根本に胴体の嵌合部分をしっかりと差し込みます。



②電池ふたを取り外します。


②-1 本体の電池ふたのネジを⊕または、
⊖ドライバーで矢印の方向に回し、
②-2 電池ふたを取り外します。

③電池を入れます。

古いボタン電池を取り外して、新しいボタン電池2個(LR44・別売り)を⊕⊖に注意してセットします。

④電池ふたを戻します。

電池ふたの突起と本体のミゾを合わせ、
電池ふたのネジを②-1と逆方向に回して閉じます。

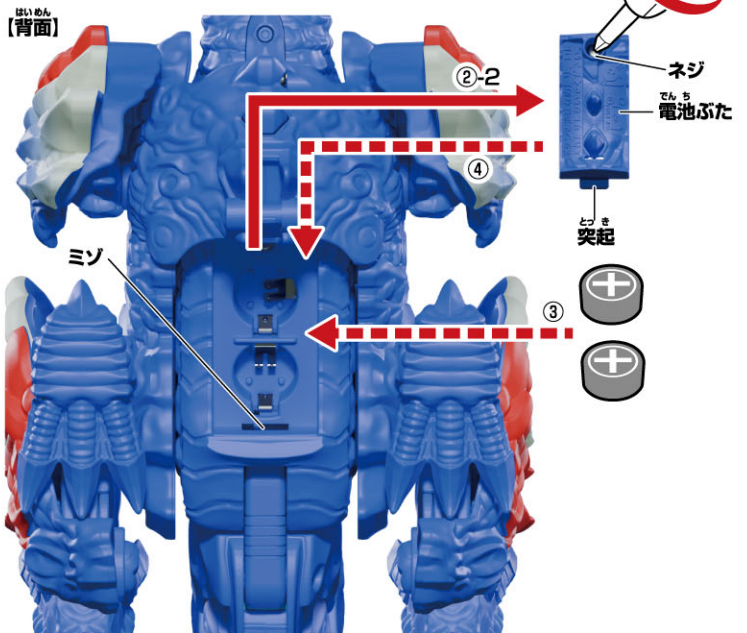


⑤尻尾を戻します。
ロック解除ボタンを押しながら尻尾を動かします。
→「レキネスアーマー解除音」が鳴ります。



肩パーツが外れてしまった場合


レキネス本体と肩パーツのジョイント同士を押し込んで取り付けます。

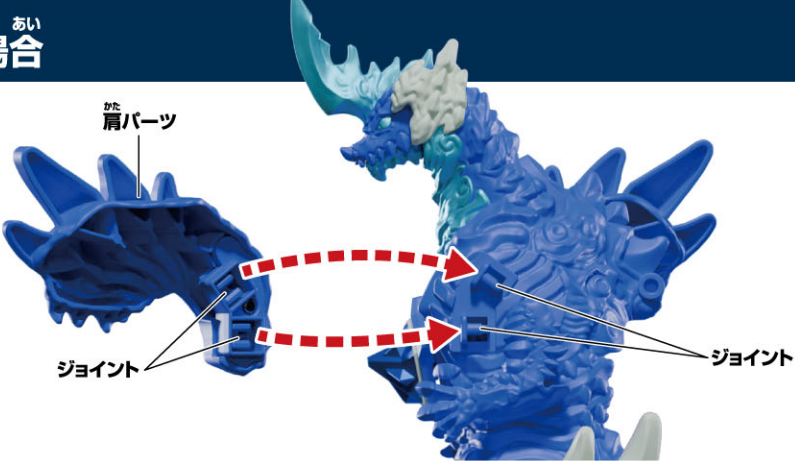

スリープモード/メテオカイジュウモードの遊び方

スリープモードからメテオカイジュウモードへの変形遊び ※スリープモードから始めます。


①レキネス本体の両足を矢印の向きに回転させます。

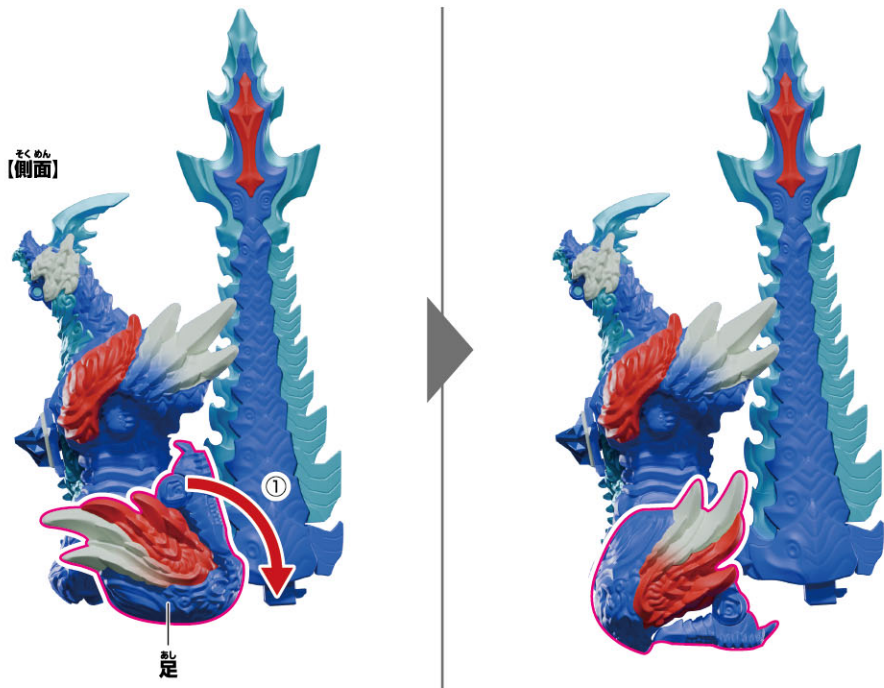

②本体の両膝を伸ばして、足裏が地面に着くように足首の角度を調整します。
③両腕を矢印の向きに回転させます。



④尻尾を下ろします。
⑤頭部を倒します。

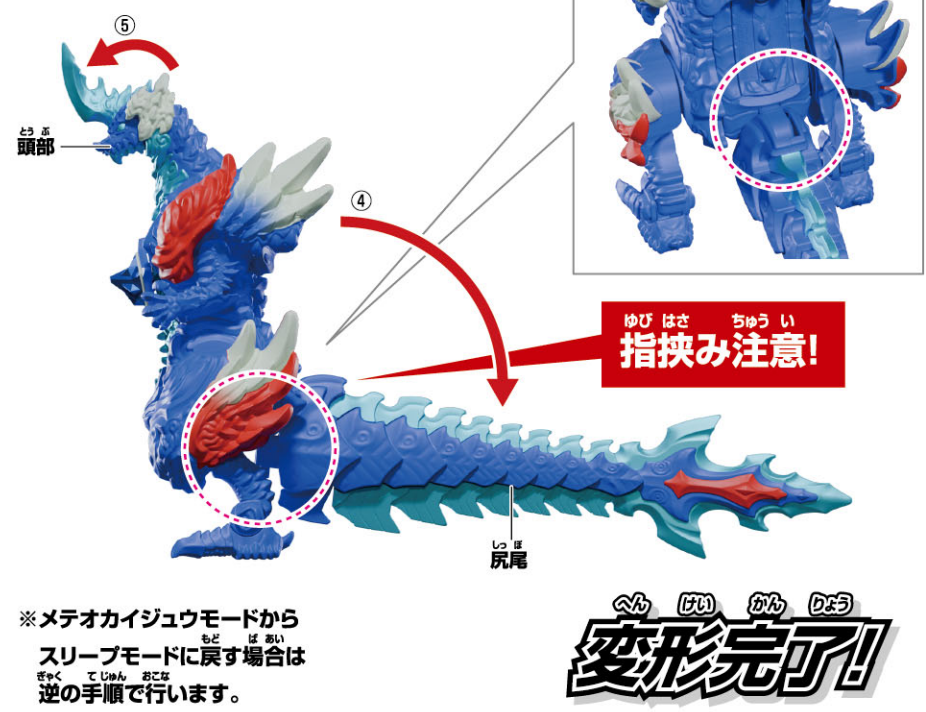

※メテオカイジュウモードからスリープモードに戻す場合は逆の手順で行います。

変形完了!

※口を開くことができます。



音声遊び ※スリープモード/メテオカイジュウモード共通となります。

ボタンを押します。
→音声が鳴ります。
※ボタンは短押し、長押しで音声が変わります。
詳しくは下記表をご覧ください。

【スリープモード】

【メテオカイジュウモード】

【背面】

ボタン

短押し	
順番	音声
1	レキネス鳴き声B
2	レキネス歩行音
3	尻尾斬撃音
4	レキネス鳴き声C
5	レキネスキネシス発動音
6	レキネス鳴き声A
7	レキネス走行音
8	頭部斬撃音

長押し	
順番	音声
1	コウセイ「頼んだぞ!レキネス!!」
2	メテオカイジュウモード変形音
3	レキネス実体召喚音
4	コウセイ「レキネス!ソラトを助けてくれ!!」
5	コウセイ「今だ!」
6	コウセイ「レキネス!行っけー!!」
7	コウセイ「力を合わせて、アイツを倒すぞ!」
8	カリバーモード変形音

※8のあとは1に戻ります。

※8のあとは1に戻ります。

※一定時間放置すると「レキネス鳴き声C」が鳴ったあと、スリープ状態に入ります。

※スリープ状態に入ったあとにボタンを押すと、「レキネス鳴き声A」が鳴ります。

レキネスカリバーの遊び方

メテオカイジューモードからカリバーモードへの変形遊び ※カイジューモードから始めます。


①レキネス本体の頭部を上に向けます。



②両腕を矢印の向きに回転させて、両腕を収納します。




③両膝をたたみます。

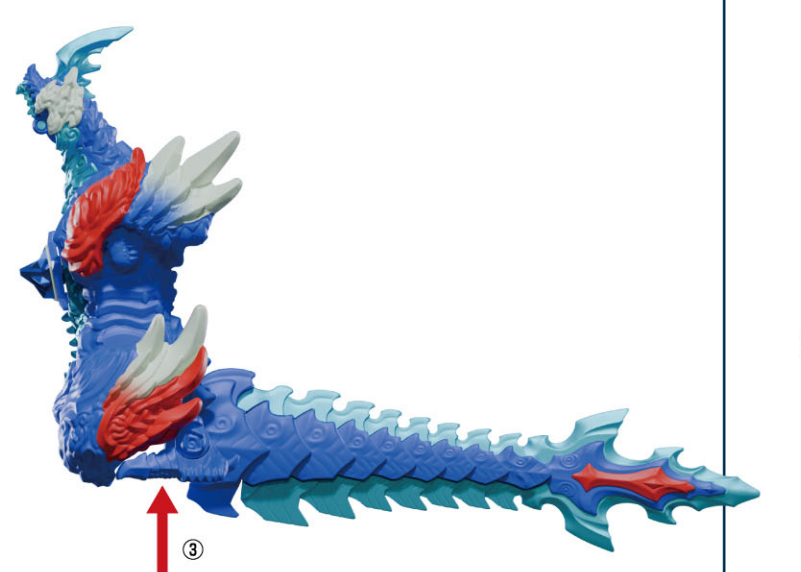


④両足を矢印の向きに回転させます。



⑤尻尾を矢印の向きに倒し、尻尾の根本に胴体の嵌合部分をしっかりと差し込みます。
→「レキネスカリバー変形完了音」が鳴ります。

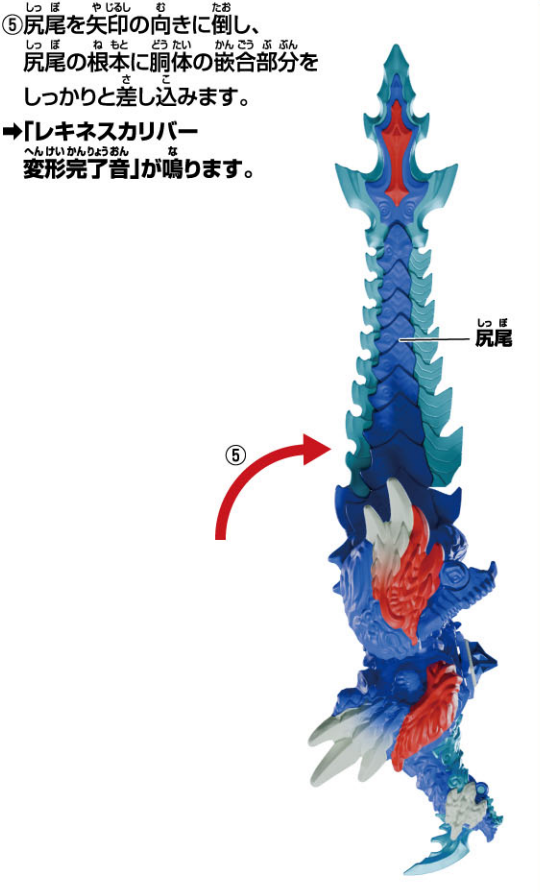


⑥胴体を矢印の向きに倒します。

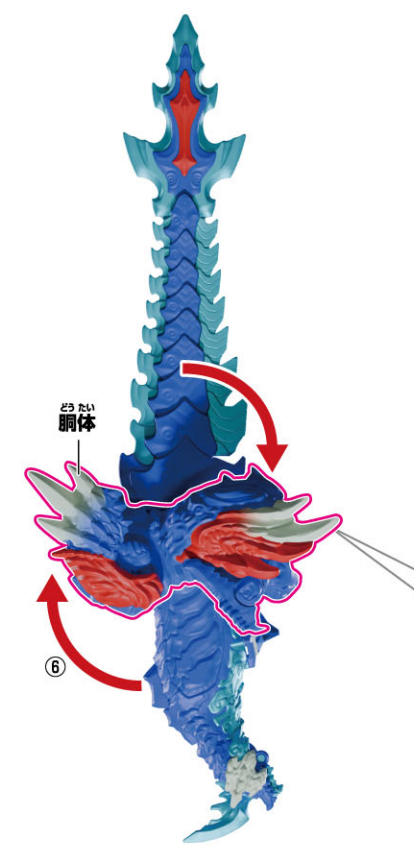

変形完了!

※レキネスカリバーからメテオカイジューモードに戻す場合は逆の手順で行います。

尻尾を元に戻す場合、ロック解除ボタンを押しながら尻尾を動かしてください。
→「レキネスアーマー解除音」が鳴ります。

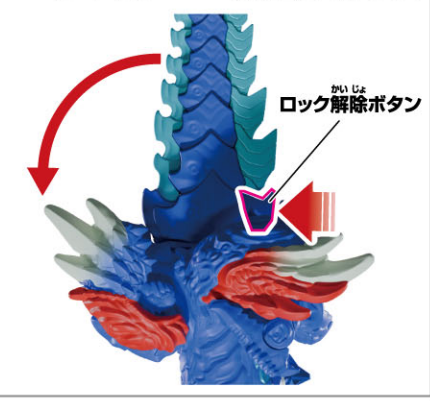

音声遊び


攻撃遊び

①トリガーを短押しします。
→「新撃音A」と「新撃音B」が交互に鳴ります。

必殺技遊び パワーチャージの時間によって必殺技が変わる!

①トリガーを長押しします。
→トリガーを長押しし続けている間、「必殺技チャージ音」が鳴ります。
②-1 「必殺技チャージ音」が鳴り終わる前にトリガーを離します。
→「レキネスカリバーサンダー音」と「レキネスカリバーキネシス音」が交互に鳴ります。
②-2 「必殺技チャージ音」が鳴り終わってからトリガーを離します。
→「レキネスカリバーコンティニウス音」が鳴ります。

※一定時間放置すると「レキネス鳴き声C」が鳴ったあと、スリープ状態に入ります。
※スリープ状態に入ったあとにボタンを押すと、「新撃音A」が鳴ります。

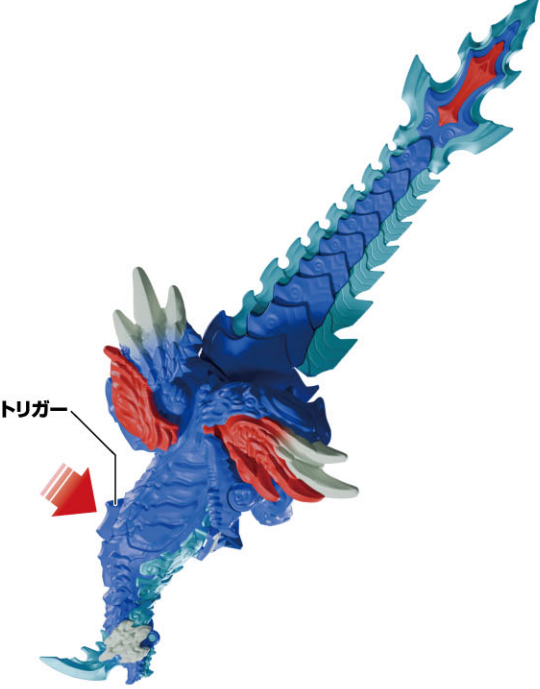




©TSUBURAYA PRODUCTIONS
©ULTRAMAN OMEGA PRODUCTION
CONSORTIUM-TV TOKYO



How to Play

Contents of the Set and Names of Each Part

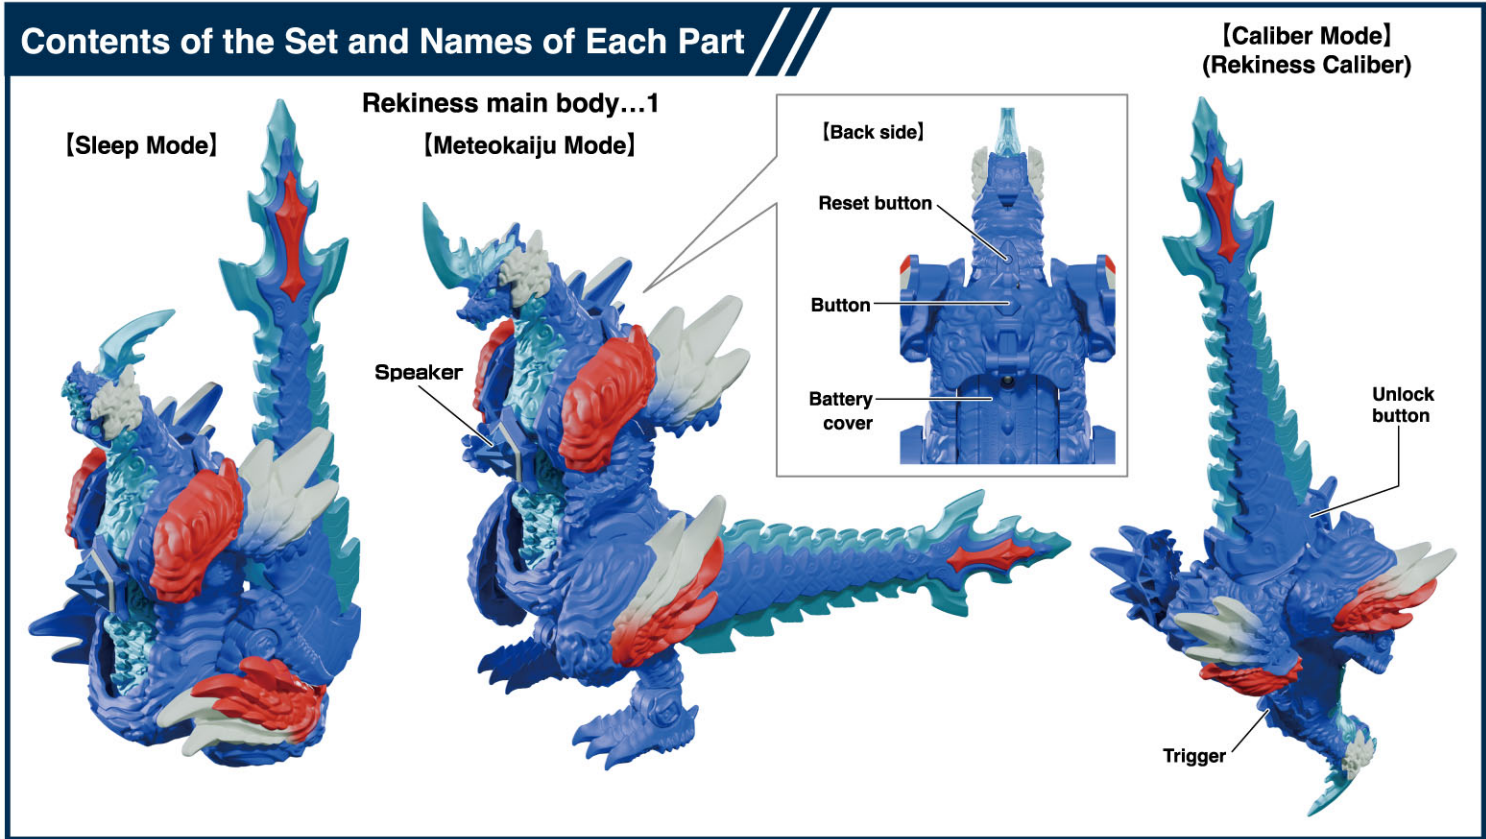

WARNING!

Caution: Keep batteries away from children. Batteries may be harmful if swallowed. NOTE: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly. Remove batteries when not in use or discharged.

CAUTION!

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio TV/technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Precautions for Use

●Plastic is the packaging material, please discard it after opening. ●Do not place this product on resin sofas, cushions or tiles. Prolonged exposure may stain. ●Do not forcibly pull or bend in the wrong direction for the movable part and the installation part. ●Some pronunciations may be inconsistent in tones or difficult to hear due to product characteristics, please understand. ●The attached button battery is for testing. If the sound becomes smaller, please replace the battery with a new one. ●This product is composed of precise electronic parts. Do not let it drop, get wet with water, get rid of, or disintegrate. At the same time, please do not use or store in high and low temperature places. ●May react to infrared remote control such as TV remote control. ●Direct sunlight or fluorescent light may cause malfunction. ●Low temperature may cause the stamp stand to fail to display the stamp pattern. You can leave the toy at room temperature to play later.

2757116

MADE IN CHINA

3+

Distributed by Bandai Namco Toys & Collectibles America Inc.,

23 Odyssey, Irvine, CA 92618. Phone: 949-262 4388

Actual size, color, style and decoration may vary. Used under license by Bandai. Bandai logo: © & © 2025 Bandai. All Rights Reserved. Package: © 2025 Bandai. Used under authorization.

Require 2 x LR44(1.5V) Battery. Battery included.

Retain packaging and instruction as it contains important information.



To Parents and Guardians

These are important precautions about using this product.
Please read carefully and explain them to your child.



Do not swing it around!!




Be careful not to pinch your fingers!!

Be careful not to get your fingers caught in the gaps between moving parts.

[Front side]

[Back side]

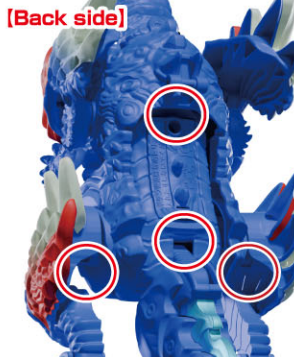


Before playing: How to remove the insulation sheet *Start from the packaged state.


①Tilt the tail down in the direction of the arrow, then firmly insert the body's fitting part into the base of the tail.




②Pull the insulation sheet protruding from the back of the Rekiness main body in the direction of the arrow.

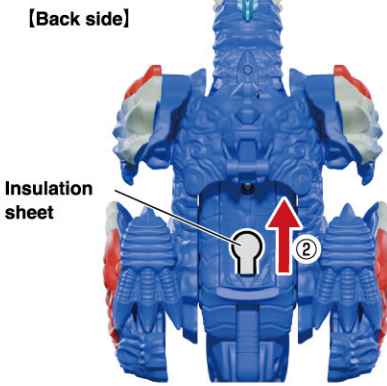

③Lightly press the reset button using a toothpick, etc. ➡It will enter sleep mode.

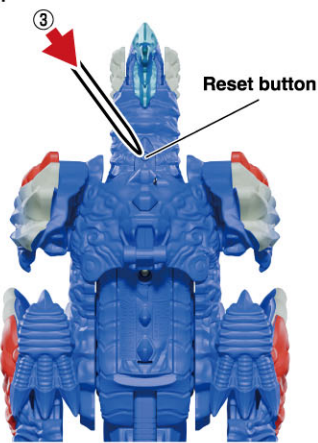

④To return the tail to its original position, press and hold the unlock button while moving the tail. ➡The "Rekiness Armor Release Sound" will play.

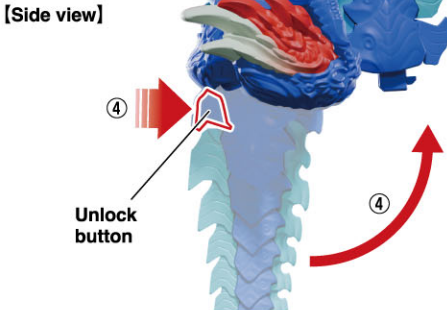


How to install batteries

*This must be done by a parent or guardian.

*If pressing buttons only produces the same sound repeatedly or other malfunctions occur, replace all button batteries with new ones.

Adult assembly required.

①Tilt the tail down in the direction of the arrow, then firmly insert the body's fitting part into the base of the tail.

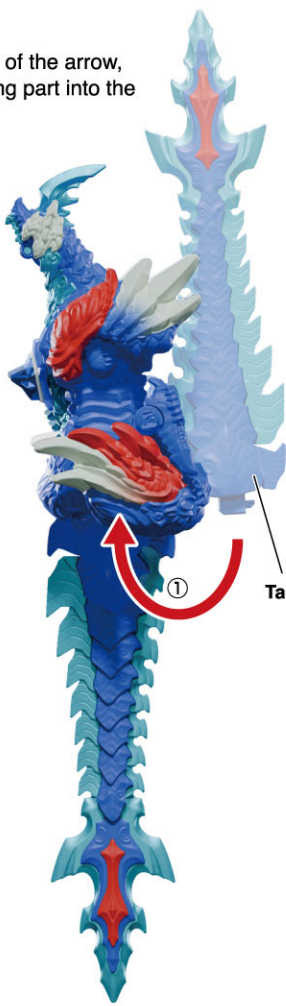

②Remove the battery cover.

②-1 Turn the battery cover screw on the back of the main body with a ⊕ or ⊖ pointed screwdriver in the direction of the arrow.
②-2 Remove the battery cover.


③Insert the button batteries.

Remove the old button batteries and insert two new button batteries (LR44, sold separately), making sure the ⊕ is the right way up.

④Replace the battery cover.

Align the protrusion on the battery cover with the groove on the main unit, then turn the battery cover screw in the opposite direction of ②-1 to close it.


[Back side]

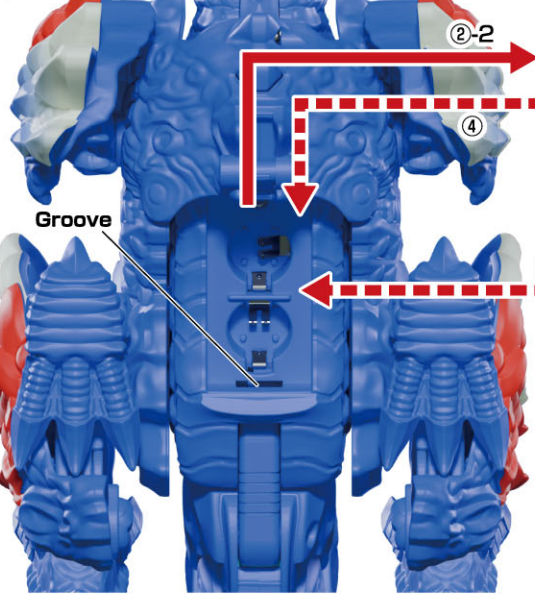

LR44 × 2


Uses two button batteries. (LR44) (included)

● The batteries installed are for testing purposes.

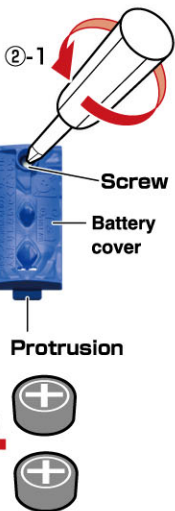


⑤Return the tail to its original position. Press and hold the unlock button to move the tail. ➡The "Rekiness Armor Release Sound" will play.

[Side view]

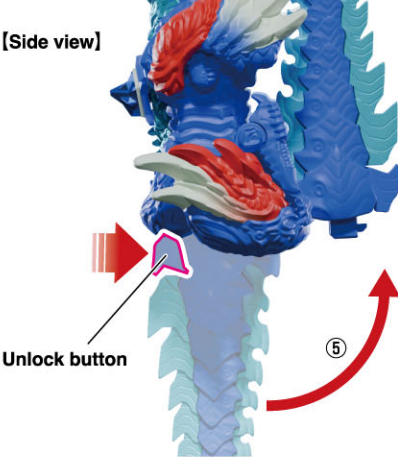

If the shoulder part becomes detached


Press the joints of the Rekines main body and shoulder part together to attach them.

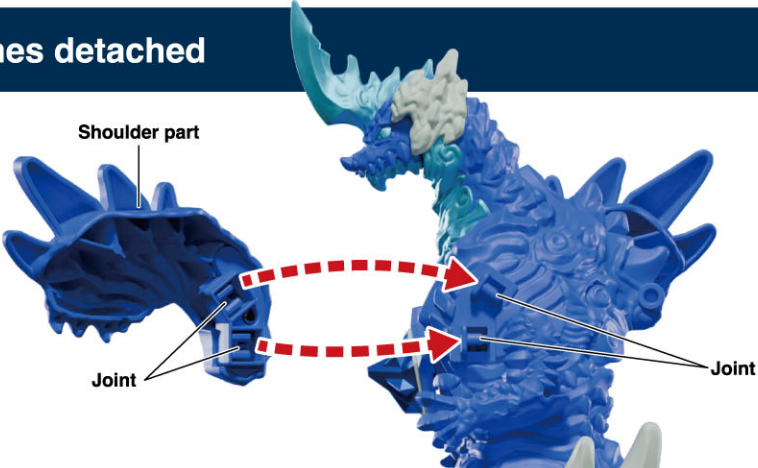


How to Play in Sleep Mode/Meteokaiju Mode

Transforming from Sleep Mode to Meteokaiju Mode *Start from Sleep Mode.


① Rotate both legs of the Rekines main body in the direction of the arrows.

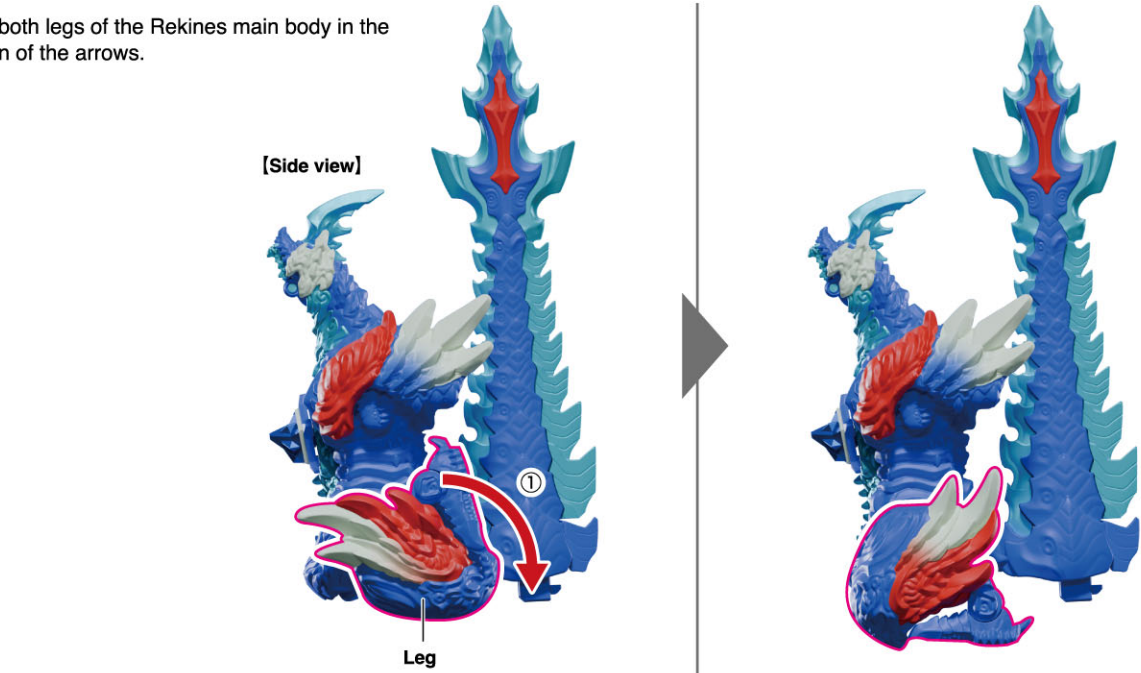


② Extend both knees and adjust the angle of ankles so the soles of its feet touch the ground.
③ Rotate both arms in the direction of the arrows.

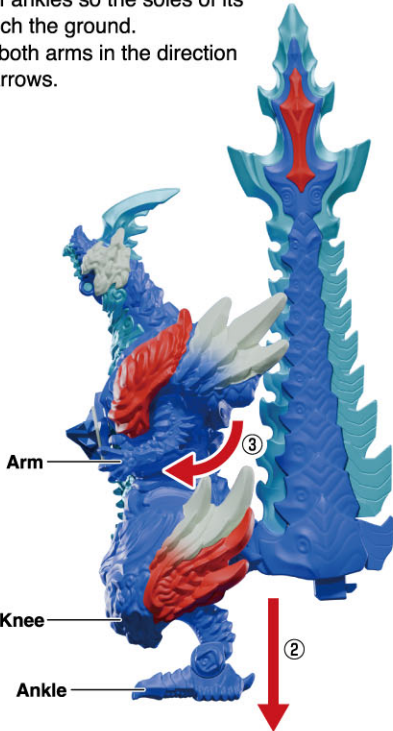

④ Tilt the tail down.
⑤ Tilt the head down.

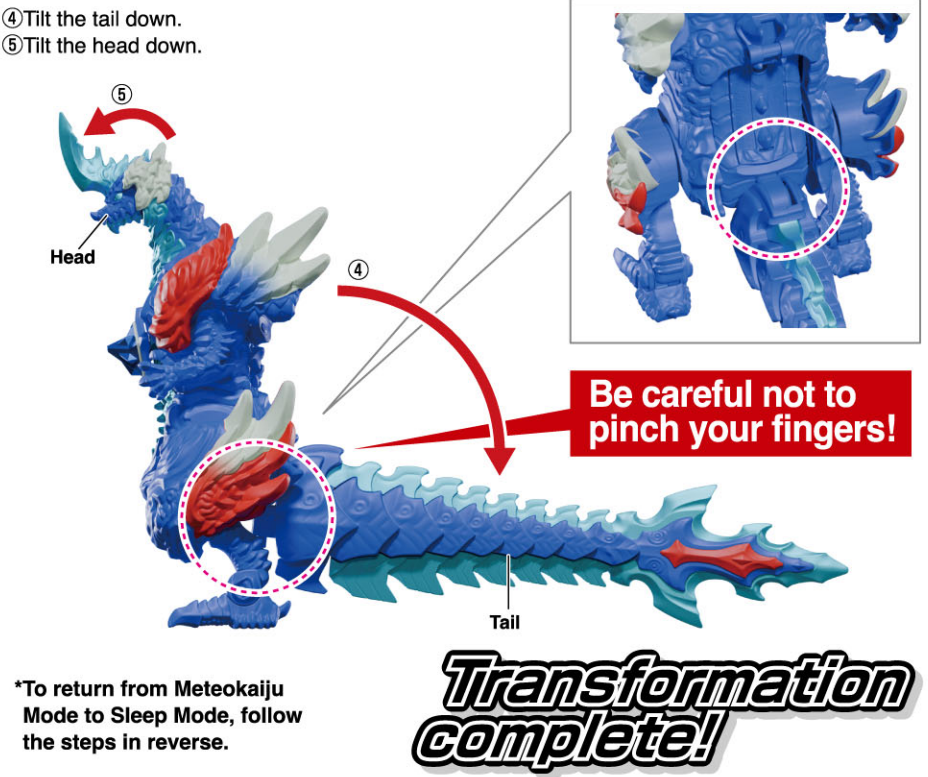


*To return from Meteokaiju Mode to Sleep Mode, follow the steps in reverse.

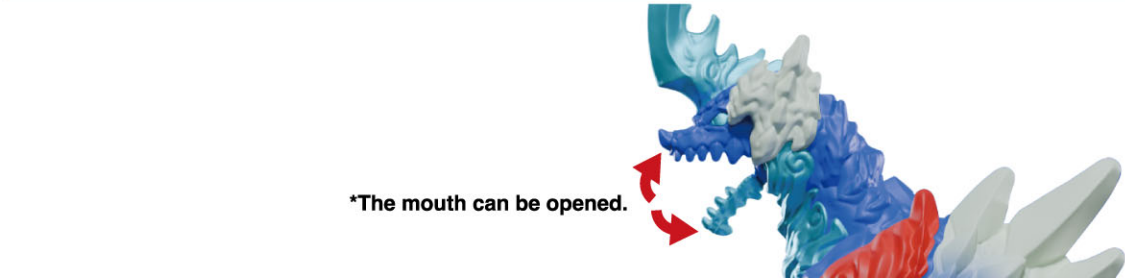

Sound Play *Common to both Sleep Mode and Meteokaiju Mode.

Press the button.
➡Sound plays.
*The sound changes depending on whether you short-press or long-press the button. For details, see the table below.
*Speaking Japanese only.

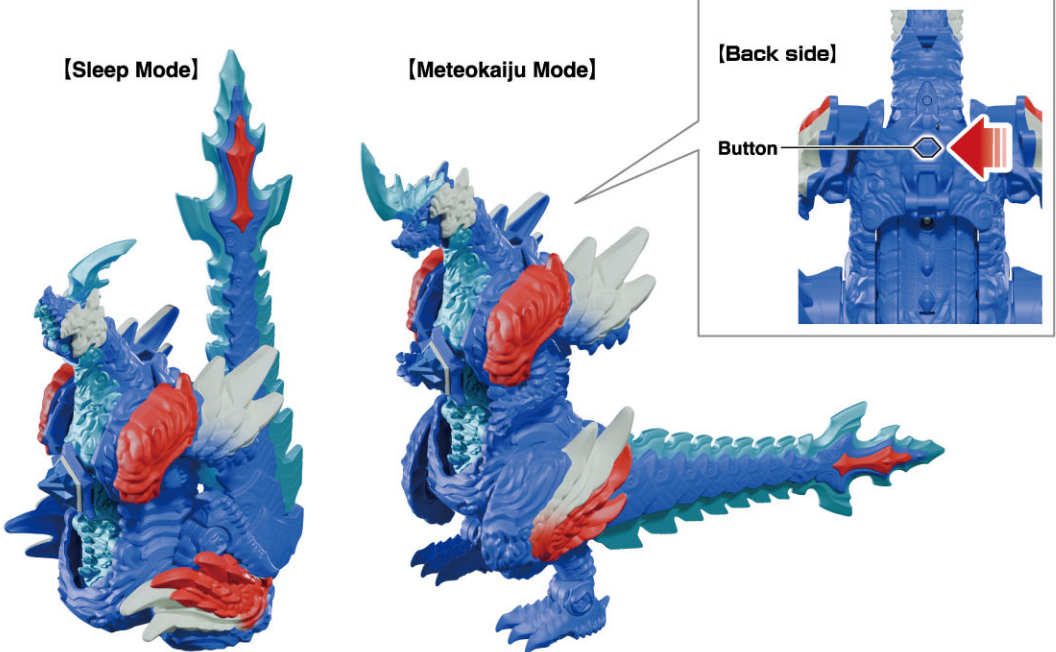

Short-pressing	
Order	Sound
1	Rekiness Cry B
2	Rekiness Walking Sound
3	Tail Slashing Sound
4	Rekiness Cry C
5	Rekiness Kinesis Activation Sound
6	Rekiness Cry A
7	Rekiness Running Sound
8	Head Slashing Sound

*After 8, it loops back to 1.

Long-pressing	
Order	Sound
1	"Kousei: ""頼んだぞ!レキネス!!""
2	Transformation Sound for Meteokaiju Mode
3	Rekiness Entity Summoning Sound
4	Kousei: ""レキネス!ソラトを助けてくれ!!""
5	Kousei: ""今だ!"]
6	Kousei: ""レキネス!行っけー!!""
7	Kousei: ""力を合わせて、アイツを倒すぞ!""
8	Transformation Sound for Caliber Mode"


*After 8, it loops back to 1.

""After being left idle for a certain period of time, "Rekiness Cry C" will play and then enter Sleep Mode.
*Pressing a button after entering Sleep Mode will play "Rekiness Cry A"."

How to Play Rekiess Caliber

Transforming from Meteokaiju Mode to Caliber Mode *Start from Meteokaiju Mode.


①Tilt the head of the Rekiess upward.

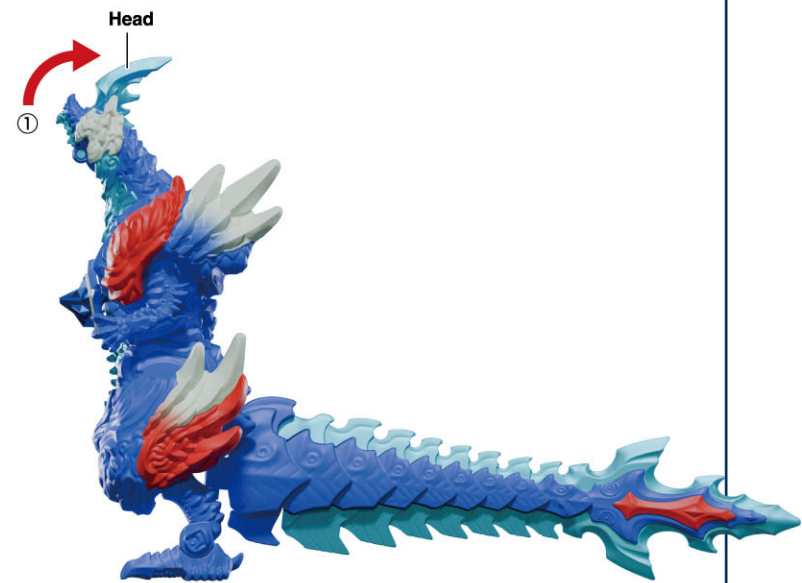


②Rotate both arms in the direction of the arrows to retract them.



③Bend both knees.

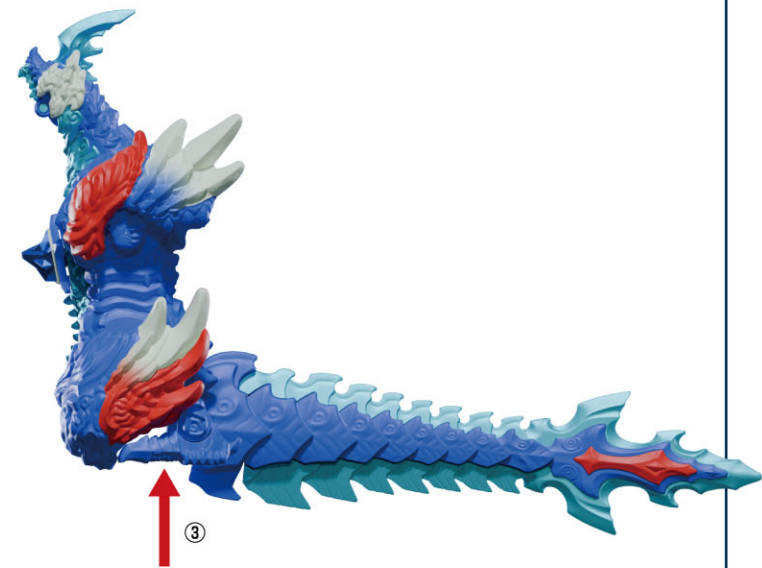


④Rotate both legs in the direction of the arrows.

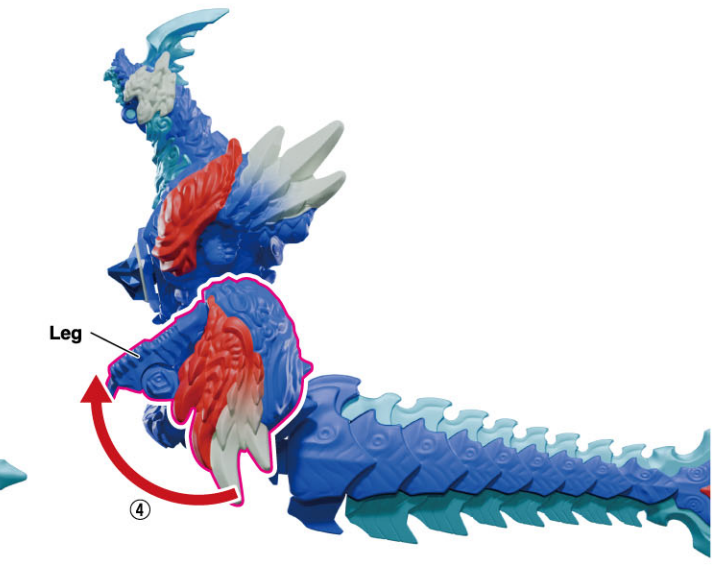


⑤Tilt the tail down in the direction of the arrow, then firmly insert the body's fitting part into the base of the tail.

➡The “Rekiess Calibur Transformation Complete Sound” will play.

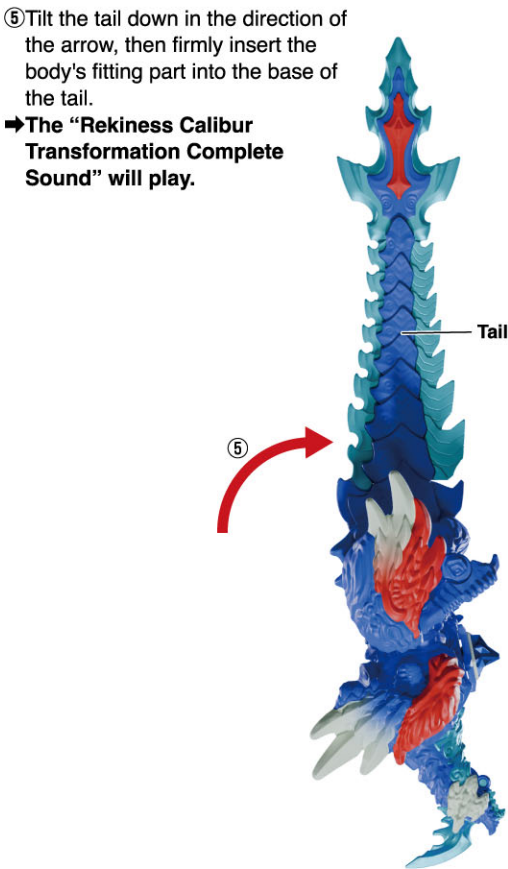

⑥Tilt the body in the direction of the arrow.

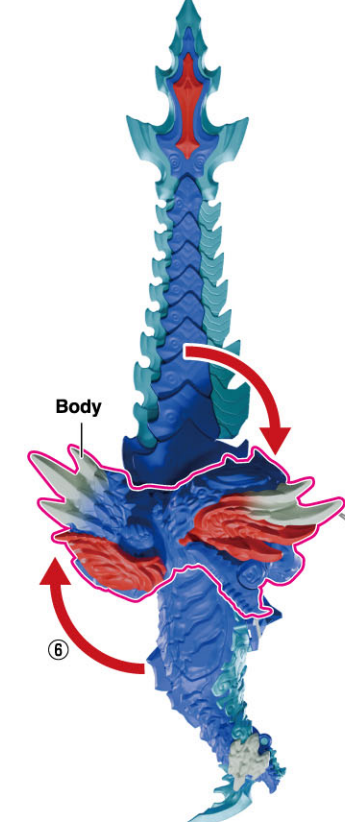


Transformation complete!

*To return from Rekiess Caliber to Meteokaiju Mode, follow the steps in reverse.

To return the tail to its original position, press and hold the unlock button while moving the tail.

➡The “Rekiess Armor Release Sound” will play.

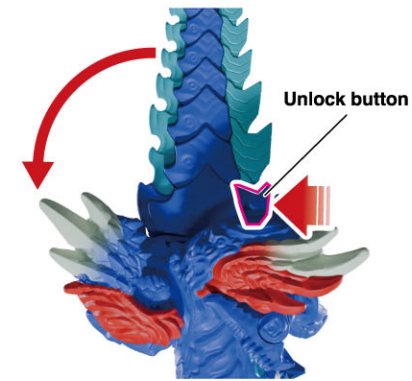

Sound Play

Assault Play

Short-press the trigger.
➡“Slashing Sound A” and “Slashing Sound B” will play alternately."

Special Move Play

The special move changes according to how long you charge the power!

- ①Long-press the trigger.
- ➡While long-pressing the trigger, the “Special Move Charge Sound” will play.
- ②-1 Release the trigger before the “Special Move Charge Sound” finishes playing.
- ➡The “Rekiess Caliber Thunder Sound” and “Rekiess Caliber Kinesis Sound” will play alternately.
- ②-2 Release the trigger after the “Special Move Charge Sound” finishes playing.
- ➡The “Rekiess Caliber Continuous Sound” will play.

*After being left idle for a certain period of time, “Rekiess Cry C” will play and then enter Sleep Mode.
*Pressing a button after entering Sleep Mode will play “Slashing Sound A”.

