

ONE PIECE CARD GAME SOUND LOADER サウンドローダー Luffy edition

対象年齢9才以上

あそ かの 遊び方

1～2ページ目は日本語、3～4ページ目は英語の取扱説明です。
The user manual is available in Japanese on pages 1 to 2, and in English on pages 3 to 4.


セット内容

ONE PIECEカードゲーム サウンドローダー ルフィエディション本体…1

[正面]



[背面]

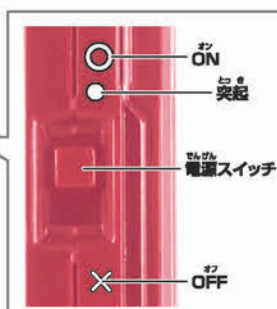

特典カード
「EB02-010
モンキー・D・ルフィ」…1



警告 (けいこく)

保護者の方へ 必ずお読みください。

●小部品があります。誤飲・窒息の危険がありますので、3才未満のお子様には絶対に与えないでください。

注意 (ちゅうい)

●本商品には電子部品の一部に磁石を使用しております。ペースメーカーをご使用の方は、本商品を身体に近づけないようご注意ください。●ぶつかけたり、ふりまわすなど乱暴な遊びをしないでください。●可動部の隙間には指などを入れないでください。はさまれてケガをする恐れがあります。●電池を誤使用すると発熱・破裂・液漏れの恐れがあります。下記に注意してください。●万一、ボタン電池を飲み込んだとき、ボタン電池から漏れた液が目に入ったときは、すぐに医師に相談してください。漏れた液が皮膚や服に付いたときは水で洗ってください。●ボタン電池は飲み込むと危険です。お子様の手の届かない所に保管してください。●万一、飲み込んだ場合は、すぐに医師に相談してください。●ボタン電池の交換は保護者の方が行ってください。●古い電池と新しい電池、いろいろな種類の電池を混ぜて使わないでください。●＋（プラス）と－（マイナス）を正しくセットしてください。●ショートさせたり充電、分解、加熱、火の中に入れたりしないでください。●廃棄するときは、自治体の廃棄処理の指示に従ってください。



（使用上の注意）

●本商品は精密な電子部品で構成されています。落としたり、水にぬらしたり、汚したり、分解したりしないでください。また、高温・低温になる所での使用、保管はさけてください。●プラスチック梱包材は開封後すぐに捨ててください。●本商品を樹脂製のソファやシート、タイルなどの上に置かないでください。長時間接触していると色が変わる場合があります。●可動部分・取付部分を無理な方向に強く引っ張ったり、曲げたりしないでください。●発音の一部にイントネーションが違っていたり、商品の特性上聞き取りにくいものがありますが、ご了承ください。●セットされている電池はテスト用です。音声が開きにくくなったら電池をご交換ください。

ONE PIECEカードゲーム サウンドローダー ルフィエディションのボタン電池の交換

※必ず保護者の方が行ってください。

※ボタンを押した際に同じ音が繰り返し鳴るなどの誤動作をする場合は、すべて新しい電池に交換してください。



●セットされている電池は、テスト用です。

①クリアカバーを外します。

②プレートを外します。




③電池ふたを取り外します。
本体の電池ふたのネジをプラスドライバーで矢印の方向に回し、電池ふたを取り外します。

④電池を入れます。
古いボタン電池を取り外して、新しいボタン電池3個(LR44・別売り)を＋／－に注意してセットします。

⑤電池ふたを戻します。
電池ふたの突起と本体のミゾを合わせ、電池ふたのネジを③と逆方向に回して閉じます。

⑥プレートを戻します。

⑦クリアカバーを戻します。

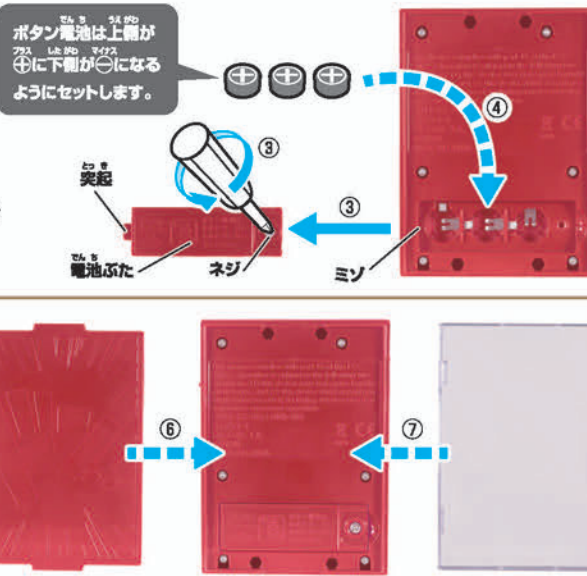


電源の入れ方

本体側面の電源スイッチを○(ON)にします。
→セリフ「ONE PIECEカードゲーム サウンドローダー 海賊王におれはなる!」が鳴ります。

※遊び終わった後は、必ず電源スイッチを
X(OFF)にしてください。

【左側面】

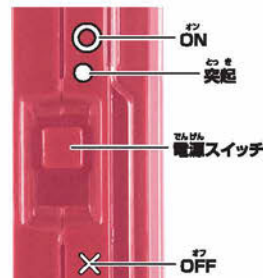

カードのセット方法

※付属の特典カード「EB02-010 モンキー・D・ルフィ」を例に説明します。

①クリアカバーを外し、好きなカードを
プレートの上にセットします。



特典カード「EB02-010
モンキー・D・ルフィ」

②クリアカバーを取り付けます。



※カードはスリーブから外してください。 ※セットできるカードは1枚です。

ONE PIECEカードゲーム サウンドローダー ルフィエディションの遊び方

効果音ボタン

効果音ボタンを短押しまたは長押しします。

→ **モードセレクトボタン** で選んだモードでの技とイメージした効果音が鳴ります。

→効果音はモード毎に2種収録しており、短押し、
長押し(約3秒)で効果音が切り替わります。

※ギア4タンクマンのみ1種です。

→音声再生中にもう一度ボタンを押すと、キャンセルされます。

BGMボタン

※BGM再生中はスリープモードになりません。

BGMボタンを短押しします。

→勝利ボイス「お前がどこの誰だろうと!!!おれはお前を越えて行く!!!!」が鳴ります。

BGMボタンを2回連続で短押しすると、

→敗北ボイス「おれは!!!!弱いっ!!!!」が流れます。

BGMボタンを長押し(約3秒)で、

→SEKAI NO OWARI「最高到達点」(TVアニメサイズ約90秒)が流れます。

→楽曲再生中にボタンを長押しすると再生が止まります。

モードセレクトボタン

モードセレクトボタンを短押しします。

→ボタンを押す毎に下記表の順番でモードが切り替わり、モード名が鳴ります。

→短押しで次のモードに切り替わり、長押し(約3秒)でひとつ前のモードに戻ります。

※モードセレクトボタンを2回連続で短押しすると音声ボリュームを変更できます。

電源起動時は、ボリューム中サイズで設定されており、中→小→大の順で
ボリュームが変わります。音声ボリューム変更後に電源スイッチをX(OFF)にし、
再度電源スイッチを○(ON)にすると、前回の音声ボリュームで再生されます。

スリープモード

※音声出力終了後、ボタン操作が無い
状態で3秒経過すると、電池の消耗を
抑えるスリープモードになります。

※スリープモードから起動する場合や、
電源を入れた後に

モードセレクトボタンを押すと、
最後に選択したモード名が鳴ります。

※スリープモードからの復帰は、
効果音ボタン/BGMボタン/
モードセレクトボタンのいずれでも
復帰します。

※モードセレクトボタンで復帰した場合は、
最後に選択されたモード名が鳴り、
効果音ボタンで復帰した場合は、
最後に選択されたモードの
短押しの効果音が鳴り、
BGMボタンで復帰した場合は、
短押しの場合は勝利ボイス、
2回連続短押しの場合は敗北ボイス、
長押しの場合はBGMで復帰します。

「ギア」「技」リスト

モード名	技名
通常時 (通常時は、太鼓の効果音で「ドンドンドン」が再生されます。)	ゴムゴムの銃
	ゴムゴムのバズーカ
ギア2	ゴムゴムの火拳銃
	ゴムゴムの鷹銃乱打
ギア3	ゴムゴムの象銃
	ゴムゴムの業火拳銃
ギア4 バウンドマン	ゴムゴムの猿王銃
	ゴムゴムの覇猿王銃
ギア4 タンクマン	ゴムゴムのキャノンボール
ギア4 スネイクマン	ゴムゴムのJET大蛇砲
	ゴムゴムの王蛇
ギア5	ゴムゴムの雷
	ゴムゴムの猿神銃

勝利ボイス

お前がどこの誰だろうと!!!
おれはお前を越えて行く!!!!

敗北ボイス

おれは!!!!
弱いっ!!!!

※ONE PIECEカードゲーム サウンドローダー ルフィエディション本体は、公式・公認イベントでは使えません。

ONE PIECE

CARD GAME

SOUND LOADER

Luffy edition



Suitable for
ages 9 and over

How to Play


SET CONTENT

ONE PIECE CARD GAME SOUND LOADER Luffy edition Main unit: 1

[FRONT SIDE]

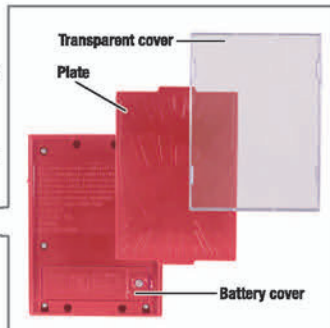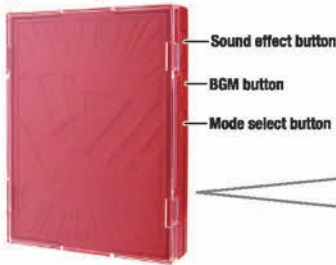

[BACK SIDE]

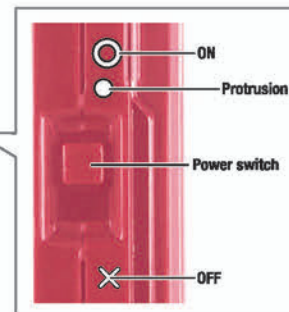

Bonus card

"EB02-010

Monkey D. Luffy": 1



⚠ WARNING

To parents and guardians: be sure to read the following instructions.

●CHOKING HAZARD - small parts. Do not give to children under three years.

⚠ WARNING

●This product uses magnets for some electronic components. If you are using a pacemaker, keep this product away from your body. ●Do not bump or swing around this product. ●Do not insert fingers, etc. into the gaps between the movable parts, which may result in injury. <If the batteries are used incorrectly, they may overheat, rupture, or leak. Please be aware of the following.> ●If a button cell is swallowed or liquid leaked from it gets into your eyes, consult a physician immediately. If leaked liquid gets on your skin or clothes, wash with water. ●Button batteries are dangerous if swallowed. Keep out of reach of children. If swallowed, consult a physician immediately. ●Button batteries must be replaced by parents or guardians. ●Do not use old batteries, new batteries, or batteries of various types together. ●Ensure the batteries are inserted with the correct polarity. ●Do not short-circuit, charge, disassemble, heat, or put the battery into fire. ●When disposing of batteries, follow the instructions of your local government.

CAUTION WHEN USING

●This product is composed of precision electronic components. Do not drop, get wet, dirty, or disassemble the product. Also, avoid using or storing it in high or low temperatures. ●Dispose of the plastic packaging immediately after opening it. ●Do not place this product on plastic sofas, sheets, tiles, etc. If you leave the product on them for a long time, the color may stain surfaces. ●Do not pull or bend the moving or mounting parts in an unnatural direction. ●Some of the pronunciation may have incorrect intonation or be difficult to hear due to the characteristics of the product. ●The batteries included are for testing purposes only. Replace the batteries when the sound becomes difficult to hear.

BUTTON BATTERY REPLACEMENT OF ONE PIECE CARD GAME SOUND LOADER Luffy edition

* Button batteries must be replaced by a parent or a guardian.

* If the button malfunctions when pressed (e.g. the same sound repeats), replace all the batteries with new ones.

LR44 × 3


Requires 3 LR44/A76 (1.5V)
Button Batteries

●Included batteries are for
demonstration purposes only.

- (1) Remove the transparent cover.
- (2) Remove the plate.




- (3) Remove the battery cover. Use a Phillips or flat-head screwdriver to turn the screw on the battery cover of the main unit in the direction of the arrow and remove the cover.
- (4) Insert batteries. Remove old button batteries and insert three new ones (LR44; please purchase them yourself), taking care of the polarity.
- (5) Close the battery cover again. Align the protrusion on the battery cover with the groove on the main unit, and close the cover by turning the screw in the opposite direction to (3).
- (6) Attach the plate again.
- (7) Attach the transparent cover again.

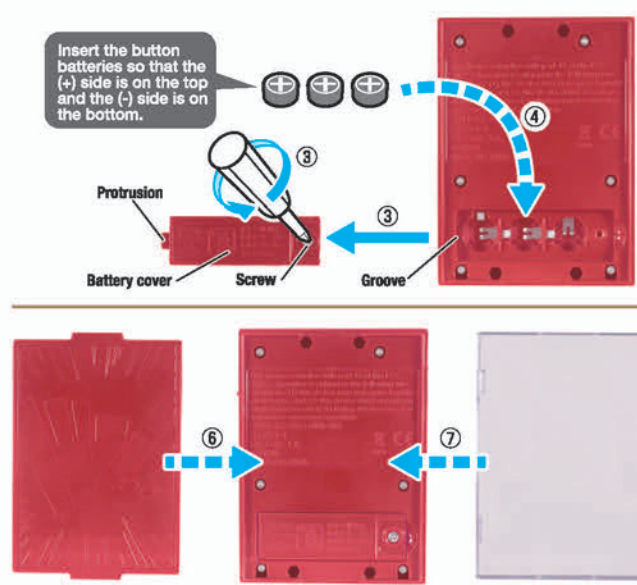

HOW TO TURN ON POWER

Turn the power switch on the side of the main unit to ○ (ON).
➡The words “ONE PIECE CARD GAME SOUND LOADER, Kaizoku-ō ni ore wa naru!” will be played.

*After finishing playing, be sure to turn the power switch to ✕ (OFF).

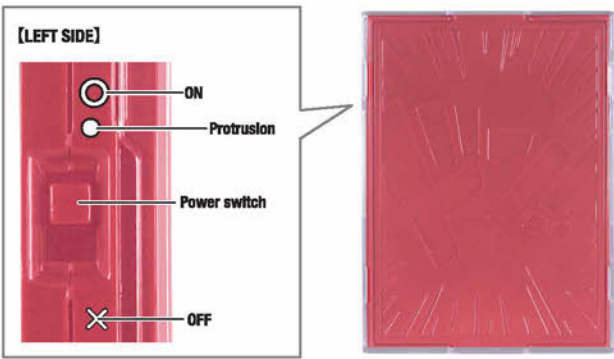

HOW TO SET CARDS

*Example using the attached bonus card “EB02-010 Monkey D. Luffy”

(1) Remove the transparent cover and set your favorite card on the plate.



*Remove the card from the sleeve. *Only one card can be set.

(2) Attach the transparent cover.



HOW TO PLAY ONE PIECE CARD GAME SOUND LOADER Luffy edition

SOUND EFFECT BUTTON

Short-press or long-press the sound effect button.
➡ Selecting a mode using the mode select button activates a technique and a sound effect that matches its image.
➡ Two sound effects are recorded for each mode. The sound effect will change depending on short-pressing or long-pressing (for about 3 seconds).
*There is only one type for GEAR 4 TANKMAN.
➡ If you press the button again while the sound is playing back, it will be canceled.

BGM BUTTON

*The device will not enter sleep mode while BGM is playing back.

Short-press the BGM button.
➡ The victory voice will be played: “Omae ga doko no dare darou to!!! Ore wa omae o koete iku!!!!”
➡ Short-press the BGM button twice and the defeat voice will be played: “Ore wa!!!! yowai!!!!”
➡ Long-press the BGM button (for about 3 seconds) to play “The Peak” by SEKAI NO OWARI (TV anime version, about 90 seconds).
➡ Long-press button to stop playback while the song is playing.

MODE SELECTION BUTTON

Short-press the BGM button.
➡ Each time you press the button, the mode will change in the order of the table below, and the mode name will be played.
➡ Short-press the button to switch to the next mode, and long-press the button (for about 3 seconds) to return to the previous mode.
*Short-press the mode selection button twice to adjust the sound volume. When the device is switched on, the sound volume is set to Medium by default. You can change it by cycling through Medium, Low, and High.

SLEEP MODE

*After the voice is played back, if no button is operated for 3 seconds, the device will enter sleep mode to reduce power consumption.
*When returning from sleep mode or pressing the mode select button after turning on the power, the name of the last selected mode will be played.
*You can return from sleep mode by pressing either the sound effect button, the BGM button or the mode select button.
*When returning from sleep mode: Pressing the mode select button: The name of the last selected mode will be played. Pressing the sound effect button: The sound effect of the last selected mode (short press ver.) will be played. Pressing the BGM button: If short-pressed the victory voice will be played; if short-pressed twice the defeat voice will be played; and if long-pressed the BGM will be played.

Gear and Technique list

MODE NAME	TECHNIQUE
NORMAL (Normally, a “don don don” drum sound effect will be played.)	Gomu Gomu no Pisutoru
	Gomu Gomu no Bazūka
GEAR 2	Gomu Gomu no Reddohōku
	Gomu Gomu no Hōku Gatoringu
GEAR 3	Gomu Gomu no Erefanto Gan
	Gomu Gomu no Reddorokku
GEAR 4 BOUNDMAN	Gomu Gomu no Kongu Gan
	Gomu Gomu no Ōbā Kongu Gan
GEAR 4 TANKMAN	Gomu Gomu no Kyanonbōru
GEAR 4 SNAKEMAN	Gomu Gomu no Karuvarin
	Gomu Gomu no Kingu Kobura
GEAR 5	Gomu Gomu no Kaminari
	Gomu Gomu no Bajurangu Gan

Victory voice

Omae ga doko no dare darou to!!!
Ore wa omae o koete iku!!!!

Defeat voice

Ore wa!!!!
yowai!!!!

* The main unit of ONE PIECE CARD GAME SOUND LOADER Luffy edition cannot be used at official or authorized events.